


FUJIFILM

DIGITAL CAMERA X20

Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM digital camera and the supplied software. Be sure that you have read and understood its contents and the warnings in "For Your Safety" (📖 ii) before using the camera.

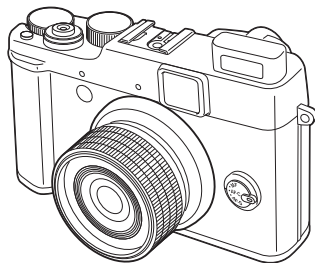

For information on related products, visit our website at http://www.fujifilm.com/products/digital_cameras/index.html

For more information on the X20, visit <http://fujifilm-x.com/x20/>

BL02101-104 **EN**

Before You Begin

First Steps

Basic Photography and Playback

More on Photography

More on Playback

Movies

Connections

Menus

Technical Notes

Troubleshooting

Appendix



For Your Safety

IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow Instructions:** All operating and use instructions should be followed.

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do

not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered.

The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Power-Cord Protection: Power-Supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

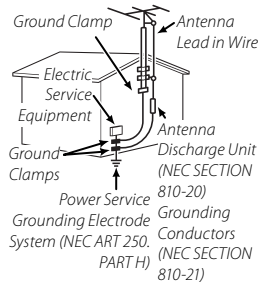

Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Service: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

When the power-supply cord or plug is damaged.

If liquid has been spilled, or objects have fallen into the video product.

If the video product has been exposed to rain or water.

If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally be following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance - this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.



Be sure to read this notes before using

Safety Notes




- Make sure that you use your camera correctly. Read these Safety Notes and your *Owner's Manual* carefully before use.
- After reading these Safety Notes, store them in a safe place.

About the Icons


The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	WARNING	This icon indicates that death or serious injury can result if the information is ignored.
	CAUTION	This icon indicates that personal injury or material damage can result if the information is ignored.










The icons shown below are used to indicate the nature of the information which is to be observed.

	Triangular icons tell you that this information requires attention ("important").
	Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
	Filled circles with an exclamation mark tell you an action that must be performed ("Required").

WARNING

	If a problem arises, turn the camera off, remove the battery, disconnect and unplug the AC power adapter.
	Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.
	• Contact your FUJIFILM dealer.

WARNING

	Do not allow water or foreign objects to enter the camera.
<i>Avoid exposure to water</i>	If water or foreign objects get inside the camera, turn the camera off, remove the battery and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. • Contact your FUJIFILM dealer.
	Do not use the camera in the bathroom or shower.
<i>Do not use in the bathroom or shower.</i>	This can cause a fire or electric shock.
	Never attempt to disassemble or modify (never open the case).
<i>Do not disassemble</i>	Failure to observe this precaution can cause fire or electric shock.
	Should the case break open as the result of a fall or other accident, do not touch the exposed parts.
<i>Do not touch internal parts</i>	Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.
	Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.
	These actions could damage the cord and cause a fire or electric shock. • If the cord is damaged, contact your FUJIFILM dealer.
	Do not place the camera on an unstable surface.
	This can cause the camera to fall or tip over and cause injury.
	Never attempt to take pictures while in motion.
	Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident.
	Do not touch any metal parts of the camera during a thunderstorm.
	This can cause an electric shock due to induced current from the lightning discharge.
	Do not use the battery except as specified.
	Load the battery as aligned with the indicator.

**WARNING**

Do not heat, charge or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Do not use chargers other than the specified model to charge the battery.

Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.



Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown.

The use of other power sources can cause a fire.



If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here.

The Ni-MH battery charger is designed for FUJIFILM HR-AA Ni-MH batteries. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.



Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



Do not use in the presence of flammable objects, explosive gases, or dust.



When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape.

Contact with other metallic objects or battery could cause the battery to ignite or burst.



Keep Memory Cards out of the reach of small children.

Because Memory Cards are small, they can be swallowed by children. Be sure to store Memory Cards out of the reach of small children. If a child swallows a Memory Card, seek medical attention or call an emergency number.

**CAUTION**

Do not use this camera in locations affected by oil fumes, steam, humidity or dust.

This can cause a fire or electric shock.

**CAUTION**

Do not leave this camera in places subject to extremely high temperatures.

Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



Keep out of the reach of small children.

This product could cause injury in the hands of a child.



Do not place heavy objects on the camera.

This can cause the heavy object to tip over or fall and cause injury.



Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.

This can damage the power cord or cables and cause a fire or electric shock.



Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.

This could cause a fire or electric shock.



Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.

This can cause heat to build up and distort the casing or cause a fire.



When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.

Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket.

Leaving the charger plugged into the power socket can cause a fire.



Using a flash too close to a person's eyes may temporarily affect the eyesight.

Take particular care when photographing infants and young children.



When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.

Request regular internal testing and cleaning for your camera.

Build-up of dust in your camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer to request internal cleaning every 2 years.
- Please note this is not a free of charge service.



Remove your fingers from the flash window before the flash fires.

Failure to observe this precaution could result in burns.



Keep the flash window clean and do not use the flash if the window is obstructed.

Failure to observe these precautions could cause smoke or discoloration.

Power Supply and Battery

* Confirm your battery type before reading the following descriptions.

The following explains proper use of batteries and how to prolong their life. Incorrect use of batteries can cause shorter battery life, as well as leakage, excessive heat, fire or explosion.

1 Camera uses the Rechargeable Lithium-ion Battery

* When shipped, the battery is not fully charged. Always charge the battery before using it.

* When carrying the battery, install it in a digital camera or keep it in the soft case.

■ Battery Features

- The battery gradually loses its charge even when not used. Use a battery that has been charged recently (in the last day or two) to take pictures.
 - To maximize the life of the battery, turn the camera off as quickly as possible when it is not being used.
 - The number of available frames will be lower in cold locations or at low temperatures. Take along a spare fully charged battery. You can also increase the amount of power produced by putting the battery in your pocket or another warm place to heat it and then loading it into the camera just before you take a picture.
- If you are using a heating pad, take care not to place the battery directly against the pad. The camera may not operate if you use a depleted battery in cold conditions.

■ Charging the Battery

- You can charge the battery using the battery charger (included).

- The battery can be charged at ambient temperatures between 0°C and +40°C (+32°F and +104°F). Refer to the *Owner's Manual* for the time of charging battery.

- You should charge the battery at an ambient temperature between +10°C and +35°C (+50°F and +95°F). If you charge the battery at a temperature outside this range, charging takes longer because the performance of the battery is impaired.

- You cannot charge the battery at temperatures of 0°C (+32°F) or below.

• The Rechargeable Lithium-ion Battery does not need to be fully discharged or exhausted flat before being charged.

• The battery may feel warm after it has been charged or immediately after being used. This is perfectly normal.

• Do not recharge a fully charged battery.

■ Battery Life

At normal temperatures, the battery can be used at least 300 times. If the time for which the battery provides power shortens markedly, this indicates that the battery has reached the end of its effective life and should be replaced.

■ Notes on storage

• If a battery is stored for long periods while charged, the performance of the battery can be impaired. If the battery will not be used for some time, run the battery out before storing it.

• If you do not intend to use the camera for a long period of time, remove the battery from the camera.

• Store the battery in a cool place.

- The battery should be stored in a dry location with an ambient temperature between +15°C and +25°C (+59°F and +77°F).

- Do not leave the battery in hot or extremely cold places.

■ Handling the Battery Cautions for Your Safety:

- Do not carry or store battery with metal objects such as necklaces or hairpins.
- Do not heat the battery or throw it into a fire.
- Do not attempt to take apart or change the battery.
- Do not recharge the battery with chargers other than those specified.

- Dispose of used battery promptly.
- Do not drop the battery or otherwise subject it to strong impacts.
- Do not expose the battery to water.
- Always keep the battery terminals clean.
- Do not store batteries in hot places. Also, if you use the battery for a long period, the camera body and the battery itself will become warm. This is normal. Use the AC power adapter if you are taking pictures or viewing images for a long period of time.

2 Camera uses AA-size alkaline or lithium batteries or rechargeable Ni-MH (nickel-metal hydride) batteries

* For details on the batteries that you can use, refer to the *Owner's Manual* of your camera.

■ Cautions for Using Battery

- Do not heat the batteries or throw them into a fire.
- Do not carry or store batteries with metal objects such as necklaces or hairpins.
- Do not expose the batteries to water, and keep batteries from getting wet or stored in moist locations.
- Do not attempt to take apart or change the batteries, including battery casings.
- Do not subject the batteries to strong impacts.

- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- Keep the batteries out of reach of babies and small children.
- Make sure that the battery polarity (⊕ and ⊖) is correct.
- Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.
- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.



If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of eyesight if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

■ Using the AA-size Ni-MH batteries correctly

- Ni-MH batteries left unused in storage for long periods can become “deactivated”. Also, repeatedly charging Ni-MH batteries that are only partially discharged can cause them to suffer from the “memory effect”. Ni-MH batteries that are “deactivated” or affected by “memory” suffer from the problem of only providing power for a short time after being charged. To prevent this problem, discharge and recharge them several times using the camera’s “Discharging rechargeable batteries” function. Deactivation and memory are specific to Ni-MH batteries and are not in fact battery faults. See *Owner’s Manual* for the procedure for “Discharging rechargeable batteries”.

⚠ CAUTION

Do not use the “Discharging rechargeable batteries” function when alkaline batteries being used.

- To charge Ni-MH batteries, use the quick battery charger (sold separately). Refer to the instructions supplied with the charger to make sure that the charger is used correctly.
- Do not use the battery charger to charge other batteries.
- Note that the batteries feel warm after being charged.
- Due to the way the camera is constructed, a small amount of current is used even when the camera is turned off. Note in particular that leaving Ni-MH batteries in the camera for a long period will over-discharge the batteries and may render them unusable even after recharging.
- Ni-MH batteries will self-discharge even when not used, and the time for which they can be used may be shortened as a result.
- Ni-MH batteries will deteriorate rapidly if over-discharged (e.g. by discharging the batteries in a flashlight). Use the “Discharging rechargeable batteries” function provided in the camera to discharge the batteries.

- Ni-MH batteries have a limited service life. If a battery can only be used for a short time even after repeated discharge-charge cycles, it may have reached the end of its service life.

■ Disposing of Batteries

- When disposing of batteries, do so in accordance with your local waste disposal regulations.

3 Notes on both models (1 2)

■ AC Power Adapter

Always use the AC Power Adapter with the camera. The use of an AC Power adapter other than FUJIFILM AC Power Adapter can be damaged to your digital camera.

For details on the AC power adapter, refer to the *Owner’s Manual* of your camera.

- Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.

- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

Before Using the Camera

- Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.
- Bright sunlight focused through the viewfinder may damage the viewfinder display panel. Do not aim the viewfinder at the sun.

Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

- FUJIFILM Corporation cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of Memory Card containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Handling Your Digital Camera

To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

Liquid Crystal


If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin:
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye:
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed:

Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

Although the LCD panel is produced with highly sophisticated technologies, there may be black spots or permanently lit spots. This is not a malfunction, and does not affect recorded images.

Trademark Information

xD-Picture Card and  are trademarks of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiwan Inc. Macintosh, QuickTime, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows 8, Windows 7, Windows Vista, and the Windows logo are trademarks of the Microsoft group of companies. Adobe and Adobe Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and/or other countries. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark. YouTube is a trademark of Google Inc. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

Exif Print (Exif ver. 2.3)

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See <http://www.dtscc.ca.gov/hazardouswaste/perchlorate>.

For Customers in the U.S.A.

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

• You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant: To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.

For Customers in Canada

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

Disposal of Electrical and Electronic Equipment in Private Households

In the European Union, Norway, Iceland and Liechtenstein: This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste.



Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.



If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In Countries Outside the European Union, Norway, Iceland and Liechtenstein: If you wish to discard this product, including the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

About This Manual

Before using the camera, read this manual and the warnings on pages ii–ix. For information on specific topics, consult the sources below.

✓ **Table of Contents** xi

The “Table of Contents” gives an overview of the entire manual. The principal camera operations are listed here.


✓ **Troubleshooting** 122

Having a specific problem with the camera? Find the answer here.

✓ **Warning Messages and Displays** 128

Find out what’s behind that flashing icon or error message in the display.

Memory Cards

Pictures can be stored in the camera’s internal memory or on optional SD, SDHC, and SDXC memory cards ( 18), referred to in this manual as “memory cards”.

Temperature Warning

The camera will turn off automatically before its temperature or the temperature of the battery rise above safe limits. Pictures taken when a temperature warning is displayed may exhibit higher levels of “noise” (mottling). Turn the camera off and wait for it to cool before turning it on again.

Camera body care

For continued enjoyment of your camera, use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth.

Table of Contents

For Your Safety	ii
IMPORTANT SAFETY INSTRUCTIONS	ii
Safety Notes	iv
About This Manual	x

Before You Begin

Introduction	1
Symbols and Conventions	1
Supplied Accessories	1
Parts of the Camera	2
Camera Displays	5

First Steps

Attaching the Strap	11
Charging the Battery	13
Inserting the Battery and a Memory Card	15
Turning the Camera on and Off	19
Basic Setup	21



Basic Photography and Playback

Taking Pictures	22
Viewing Pictures	26


More on Photography

Shooting Mode	27
P : PROGRAM AE	28
S : SHUTTER PRIORITY AE	29
A : APERTURE PRIORITY AE	29
M : MANUAL	30
C1/C2 : CUSTOM MODE	31
Sr + ADVANCED SR AUTO	32
A AUTO	34
Adv. ADVANCED	34
SP SCENE POSITION	38
Focus Lock	39
The AEL/AFL Button	40
Locking Exposure	40
Locking Focus	40
M Macro and Super Macro Modes (Close-ups)	41
⚡ Using the Flash (Super-Intelligent Flash)	42
⌚ Using the Self-Timer	44
Continuous Shooting (Burst Mode/Bracketing)	45
☑ Exposure Compensation	49
Metering	50
Focus Mode	51
Focus Frame Selection	53
White Balance	54
Choosing the Role of the Fn Button	57
☑ Intelligent Face Detection	58
Recording Pictures in RAW Format	59
The Q (Quick Menu) Button	60

More on Playback

Playback Options	62
Continuous Shooting	62
★ Favorites: Rating Pictures	62
Playback Zoom.....	63
Multi-Frame Playback.....	64
 Deleting Pictures	65
Viewing Photo Information	66
Image Search	67
 PhotoBook Assist	68
Creating a PhotoBook	68
Viewing PhotoBooks	69
Editing and Deleting PhotoBooks	69
Viewing Panoramas	70




























 



 





Movies





 















Recording Movies	71
Movie Frame Size	73
Using an External Microphone	73
 Viewing Movies	74

Connections

Viewing Pictures on High-Definition TVs	75
Printing Pictures via USB	76
Connecting the Camera	76
Printing Selected Pictures	76
Printing the DPOF Print Order.....	77
Creating a DPOF Print Order	79
Viewing Pictures on a Computer	82
Windows: Installing MyFinePix Studio.....	82
Macintosh: Installing RAW FILE CONVERTER	84
Importing Pictures or Movies to Mac (Macintosh)	85
Connecting the Camera	86

Menus

Using the Menus: Shooting Mode	88	Shooting Menu Options (Movie Mode)	97
Using the Shooting Menu	88	MOVIE MODE	97
Shooting Menu Options	88	FACE DETECTION	97
 Adv. MODE	88	SCENE RECOGNITION	97
 SCENE POSITION	88	FILM SIMULATION	97
ISO ISO	89	STILL SHOOTING IN MOVIE	97
 IMAGE SIZE	90	MIC LEVEL ADJUSTMENT	97
 IMAGE QUALITY	91	Using the Menus: Playback Mode	98
 DYNAMIC RANGE	91	Using the Playback Menu	98
 FILM SIMULATION	92	Playback Menu Options	99
 FILM SIMULATION BKT	92	 PHOTOBOOK ASSIST	99
 COLOR	93	 IMAGE SEARCH	99
 SHARPNESS	93	 ERASE	99
 HIGHLIGHT TONE	93	 MARK FOR UPLOAD TO	99
 SHADOW TONE	93	 SLIDE SHOW	100
 NOISE REDUCTION	93	 RAW CONVERSION	101
 INTELLIGENT DIGITAL ZOOM	93	 RED EYE REMOVAL	102
 ADVANCED ANTI BLUR	93	 PROTECT	102
 FACE DETECTION	93	 CROP	103
 AF MODE	94	 RESIZE	103
 MF ASSIST	94	 IMAGE ROTATE	104
 Fn BUTTON	94	 COPY	104
 DISP. CUSTOM SETTING	95	 PRINT ORDER (DPOF)	105
 FLASH	95	 DISP. ASPECT	105
 EXTERNAL FLASH	96		
 CUSTOM SET	96		
 OVF/LCD SETTING	96		

The Setup Menu	106
Using the Setup Menu.....	106
Setup Menu Options.....	107
 DATE/TIME	107
 TIME DIFFERENCE	107
 言語/LANG.	107
 RESET.....	107
 SILENT MODE	108
 FOCUS CONTROL DIAL.....	108
 FOCUS CHECK.....	108
 SOUND SET-UP	108
 SCREEN SET-UP.....	109
 POWER MANAGEMENT	110
 DUAL IS MODE.....	111
 RED EYE REMOVAL	112
 AF ILLUMINATOR	112
 AE/AF-LOCK MODE.....	112
 AE/AF-LOCK BUTTON.....	112
 SAVE DATA SET-UP	113
 FOCUS SCALE UNITS	114
 CUSTOM RESET.....	114
 Eye-Fi TRANSFER.....	115
 FORMAT.....	115

Technical Notes

Optional Accessories	116
Accessories from FUJIFILM	117
Using Optional Accessories.....	119
Caring for the Camera	121

Troubleshooting

Problems and Solutions	122
Warning Messages and Displays	128

Appendix

Memory Card Capacity	132
Specifications	133
Restrictions on Camera Settings	138
Shooting Mode and Camera Settings.....	138


Introduction

Symbols and Conventions

The following symbols are used in this manual:

 : This information should be read before use to ensure correct operation.

 : Points to note when using the camera.

 : Additional information that may be helpful when using the camera.

 : Other pages in this manual on which related information may be found.

 
Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

Supplied Accessories


The following items are included with the camera:




NP-50 rechargeable battery



BC-50B battery charger

 

USB cable

 

Lens cap



*Plug adapter**



Clip attaching tool





Metal strap clips (x2)

- CD-ROM
- Owner's Manual
(this manual)
- Shoulder strap
- Protective covers (x2)


* Shape of adapter varies with region of sale.

Parts of the Camera

For more information, refer to the page listed to the right of each item.

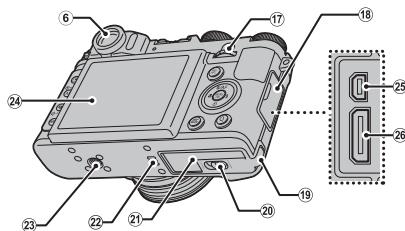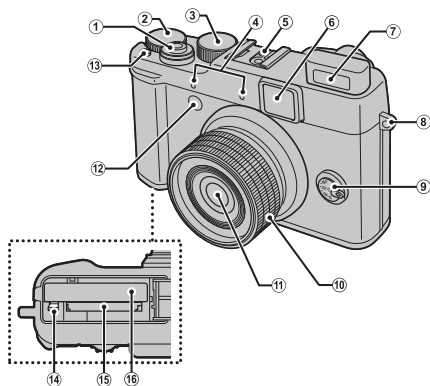

1	Shutter button.....	24	10	Zoom ring.....	23	18	Terminal cover.....	75, 76, 86
2	Exposure compensation dial.....	49		ON/OFF switch.....	19	19	DC coupler cable cover.....	117
3	Mode dial.....	27	11	Lens.....	133	20	Battery-chamber cover latch.....	15
4	Microphone (L/R).....	71	12	AF-assist illuminator.....	112	21	Battery-chamber cover.....	15
5	Hot shoe.....	95, 116		Self-timer lamp.....	44	22	Speaker.....	74
6	Viewfinder window.....	6	13	Fn (Function) button.....	57	23	Tripod mount.....	
7	Flash.....	42	14	Battery latch.....	15, 17	24	Monitor.....	5
8	Strap eyelet.....	11	15	Memory card slot.....	16	25	USB multi-connector.....	73, 76, 86
9	Focus mode selector.....	51	16	Battery chamber.....	15	26	Connector for HDMI cable.....	75
			17	Main-command dial.....	4			

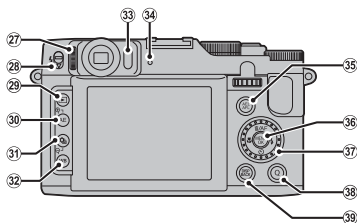

27	Diopter adjustment control	4	33	Eye sensor	7
28	⚡ (flash pop-up) switch	42	34	Indicator lamp	25
29	▶ (playback) button	19, 26	35	AEL/AFL (autoexposure/autofocus lock) button	40, 52
30	AE (autoexposure) button	50	36	Selector button (see below)	
	⌕ (playback zoom in) button	63	37	Sub-command dial	4
31	📷 (continuous shooting) button	45	38	Q button	60
	⌕ (playback zoom out) button	63	39	DISP (display)/ BACK button	9, 25
32	WB (white balance) button	54			

● The Selector Button

Move cursor up (▲)

AF (autofocus) button (📖 53)/

🗑️ (delete) button (📖 26)

MENU/OK button (📖 21)

Move cursor left (◀)


🔍 (macro) button (📖 41)

Move cursor right (▶)

⚡ (flash) button (📖 42)

Move cursor down (▼)

⌚ (self-timer) button (📖 44)

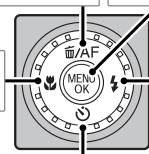

Main-command dial/Sub-command dial

Rotate the main/sub-command dial to set the aperture value or shutter speed. You can also select items using the main/sub-command dial for the selector button. To adjust focus for **MF**, rotate the sub-command dial (📖 51).



Main-command
dial





Sub-command
dial

Press the center of the main-command dial for some operations such as switching the setting item in **M** mode.




Control Lock


To lock the **Q** button and selector button (AF/☑/☺/☻), press **MENU/OK** until  is displayed. This prevents accidental operation during shooting. The controls can be unlocked by pressing **MENU/OK** until  is no longer displayed.

Diopter adjustment control

The camera is equipped with diopter adjustment to accommodate individual differences in vision. Slide the diopter adjustment control up and down until the viewfinder display is in sharp focus.

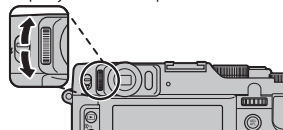


Bright Ambient Lighting

Reflections and glare caused by bright ambient lighting may make it hard to see the display in the monitor, particularly when the camera is used outdoors. This can be addressed by holding the **Q** button to trigger outdoor mode. Outdoor mode can also be enabled using the  **SCREEN SET-UP > MONITOR SUNLIGHT MODE** option in the setup menu (📖 109).

Camera Displays

The following indicators may appear during shooting and playback. The indicators displayed vary with camera settings.

■ Shooting: Optical Viewfinder

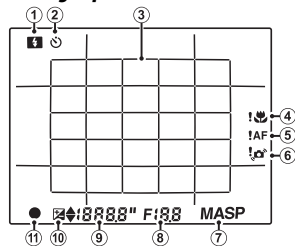

1	Flash mode.....	42	8	Aperture.....	29, 30
2	Self-timer indicator	44	9	Shutter speed.....	29, 30
3	Viewfinder focus frame			Exposure compensation value.....	49
4	Parallax warning	128		Sensitivity.....	89
5	Focus warning	24, 128	10	Exposure compensation indicator...	49
6	Blur warning	43, 128	11	Focus indicator	24
7	Shooting mode.....	27			

Optical Viewfinder

This display is immune from digital video effects and allows the subject to be viewed directly with no display lag. Subjects are always in focus, allowing you to check their expression at any time.




- The viewfinder focus frame indicates the approximate focus point for photographs taken using the optical viewfinder.
- The display in the viewfinder may differ slightly from the final photograph due to parallax.
- Frame coverage is approximately 85% (at an aspect ratio of 4:3).
- Portions of the lens may be visible in the viewfinder at some zoom positions.
- The viewfinder incorporates a special display panel that dims if the battery is not inserted. A trickle of current (too low to have any affect on battery life) keeps the display clear while the battery is inserted.

Icons and Text in the Optical Viewfinder

The display in the viewfinder may be difficult to read in bright sunlight. Normally black, the icons and text in the viewfinder turn green in dark surroundings or to show that the camera has successfully focused, red to warn that the camera has failed to focus or that the subject will be under- or over-exposed, and blue when exposure and/or focus is locked.

Shooting: LCD Monitor

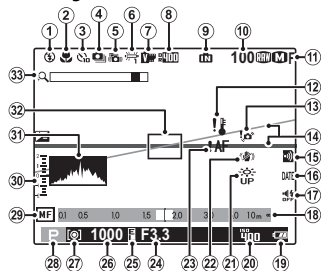


* **IM**: indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (16).

1	Flash mode.....	42	18	Distance indicator.....	51
2	Macro (close-up) mode.....	41	19	Battery level.....	20
3	Self-timer indicator	44	20	Sensitivity.....	89
4	Continuous shooting mode	45	21	Monitor sunlight mode.....	109
5	Advanced Anti Blur.....	33, 93	22	Dual IS mode	111
6	White balance	54	23	Focus warning	24, 128
7	Film simulation	92	24	Aperture.....	29, 30
8	Dynamic range.....	91	25	AE lock indicator.....	40
9	Internal memory indicator *		26	Shutter speed.....	29, 30
10	Number of available frames.....	132	27	Metering	50
11	Image size/quality	90, 91	28	Shooting mode.....	27
12	Temperature warning	x, 129	29	Manual focus indicator.....	51
13	Blur warning	43, 128	30	Exposure indicator	49
14	Electronic level.....	95	31	Histogram	10
15	Eye-Fi upload.....	115	32	Focus frame	39
16	Date stamp.....	114	33	Intelligent digital zoom.....	93
17	Silent mode indicator.....	25, 108			


Display Selection

 The **OVF** **OVF/LCD SETTING** item in the shooting menu offers a choice of **OVF** (optical viewfinder), **LCD** (LCD monitor) and **EYE SENSOR** options. If **EYE SENSOR** is selected, the viewfinder turns on automatically when you put your eye to the viewfinder, and the LCD monitor turns on when you take your eye away (note that the eye sensor may not respond depending on how you hold the camera or if you are wearing glasses).

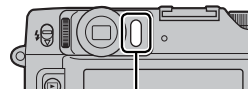

Eye sensor

■ Playback

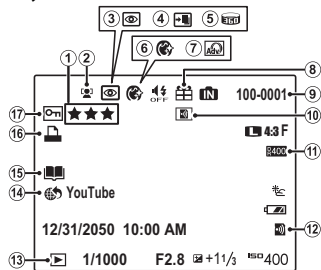


1	Favorites	62	9	Frame number	111
2	Intelligent Face Detection indicator	58, 93	10	Eye-Fi upload complete	115
3	Red-eye removal indicator	102	11	Dynamic range	91
4	Pro focus mode, pro low-light mode	36, 37	12	Eye-Fi upload	115
5	Motion panorama	34, 70	13	Playback mode indicator	26, 62
6	Portrait enhancer	38	14	Mark for upload to	99
7	Advanced filter	34	15	Photobook assist	68
8	Gift image	62	16	DPOF print indicator	80
			17	Protected image	102

■ Display Mode

Press **DISP/BACK** to cycle through display modes as follows:

Shooting

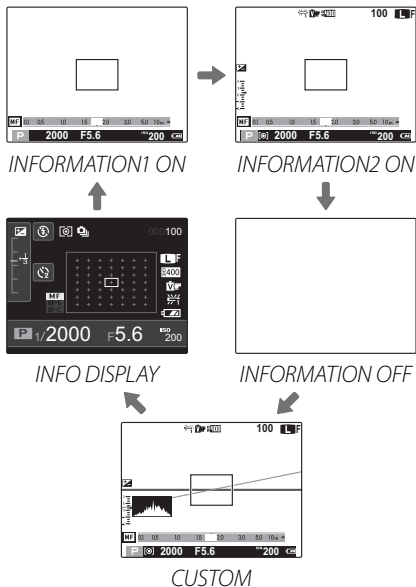


While **INFO DISPLAY** or **INFORMATION1 ON** is selected, the display mode may turn to **INFORMATION2 ON** depending on the operations.

Custom Display


Choose items for display using **DISP. CUSTOM SETTING** in the shooting menu (95).

Playback

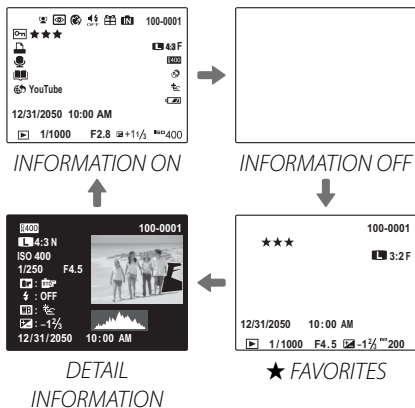

Histograms

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.

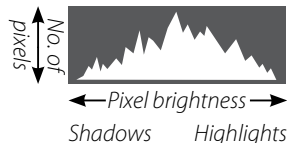

Optimal exposure: Pixels are distributed in an even curve throughout the tone range.



Overexposed: Pixels are clustered at the right side of the graph.




Underexposed: Pixels are clustered at the left side of the graph.



Detail Information

- ① Dynamic range
- ② Image size and quality
- ③ Sensitivity
- ④ Shutter speed/aperture
- ⑤ Film simulation
- ⑥ Flash mode
- ⑦ White balance
- ⑧ Exposure compensation
- ⑨ Frame number
- ⑩ Picture (overexposed areas blink on and off)
- ⑪ Histogram

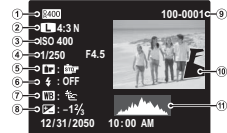


Attaching the Strap

Attach the strap clips to the camera and then attach the strap.

1 Open a strap clip.


Use the clip attaching tool to open a strap clip as shown.

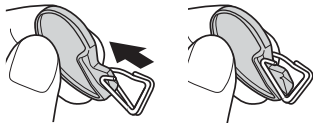

Keep the tool in a safe place. You will need it to open the strap clips when removing the strap.


2 Place the strap clip on an eyelet.

Hook the strap eyelet in the clip opening. Remove the tool, using the other hand to keep the clip in place.

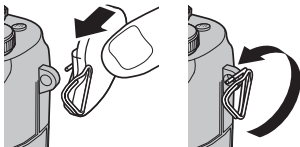


3 Pass the clip through the eyelet.

Rotate the clip fully through the eyelet until it clicks closed.

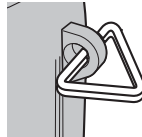

4 Attach a protective cover.

Place a protective cover over the eyelet as shown, with the black side of the cover toward the camera. Repeat Steps 1–4 for the second eyelet.

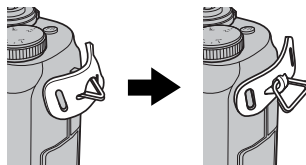


5 Insert the strap.

Insert the strap through a protective cover and strap clip.



6 Fasten the strap.

Fasten the strap as shown. Repeat Steps 5–6 for the second eyelet.

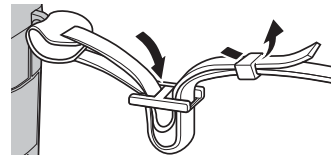


To avoid dropping the camera, be sure the strap is correctly secured.

Charging the Battery

The battery is not charged at shipment. Charge the battery before use.

1 Attach the plug adapter.

Attach the plug adapter as shown, making sure that it is fully inserted and clicks into place on the charger terminals.

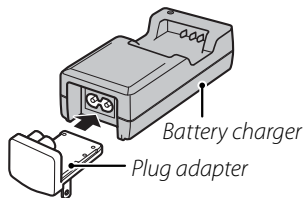


The plug adapter is exclusively for use with the supplied battery charger. Do not use it with other devices.

2 Place the battery in the supplied battery charger.

Insert the battery in the orientation indicated by the $\ominus \oplus$ labels.

The camera uses an NP-50 rechargeable battery.

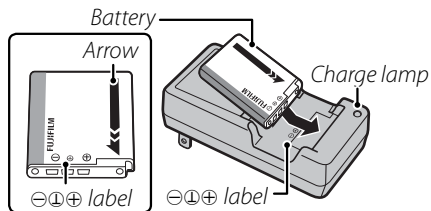

3 Plug the charger in.

Plug the charger into an indoor power outlet. The charging indicator will light.

 **The Charging Indicator**

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
Off	Battery not inserted.	Insert the battery.
	Battery fully charged.	Remove the battery.
On	Battery charging.	—
Blinks	Battery fault.	Unplug the charger and remove the battery.

4 Charge the battery.

Remove the battery when charging is complete. See the specifications (📖 137) for charging times (note that charging times increase at low temperatures).




Unplug the charger when it is not in use.

Inserting the Battery and a Memory Card

Although the camera can store pictures in internal memory, optional SD, SDHC, and SDXC *memory cards* (sold separately) can be used to store additional pictures. After charging the battery, insert the battery and memory card as described below.

1 Open the battery-chamber cover.

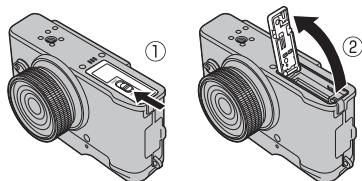


Be sure the camera is off before opening the battery-chamber cover.



- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

2 Insert the battery.


Align the orange stripe on the battery with the orange battery latch and slide the battery into the camera, keeping the battery latch pressed to one side. Confirm that the battery is securely latched.

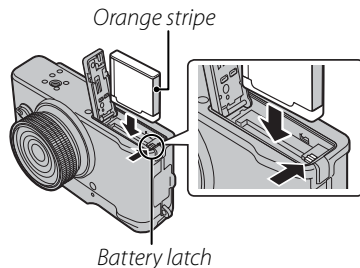


Insert the battery in the correct orientation. **Do not use force or attempt to insert the battery upside down or backwards.** The battery will slide in easily in the correct orientation.


3 Insert the memory card.

Holding the memory card in the orientation shown at right, slide it in until it clicks into place at the back of the slot.

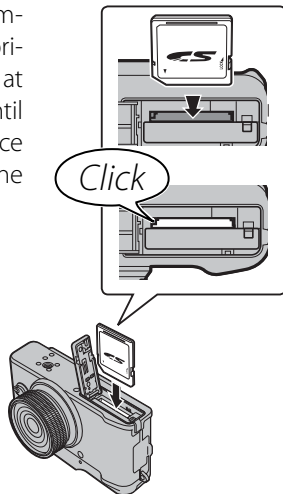


- Be sure card is in the correct orientation; do not insert at an angle or use force. If the memory card is not correctly inserted or no memory card is inserted,  will appear in the LCD monitor and internal memory will be used for recording and playback.

- SD/SDHC/SDXC memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD/SDHC/SDXC memory card, slide the write-protect switch to the unlocked position.

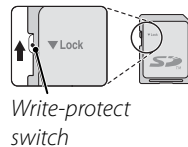

4 Close the battery-chamber cover.

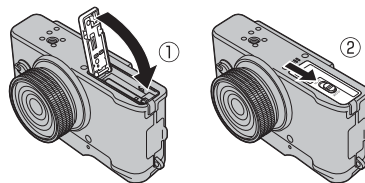

Batteries

- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Do not affix stickers or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Read the cautions in “Power Supply and Battery” (📖 vi).
- Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Using an AC Power Adapter

- The camera can be powered by an optional AC power adapter and DC coupler (sold separately). See the manuals provided with the AC power adapter and DC coupler for details.
- Depending on the country or region of sale, a demo mode slide show may start if the camera is turned on while powered by an AC power adapter. Press the shutter button to end the show.

Removing the Battery and Memory Card

 
Before removing the battery or memory card, **turn the camera off** and open the battery-chamber cover.

To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.



Battery latch

To remove the memory card, press it in and release it slowly. The card can then be removed by hand. When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.

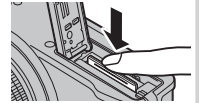

■ **Compatible Memory Cards**

FUJIFILM and SanDisk SD, SDHC, and SDXC memory cards have been approved for use in the camera. A complete list of approved memory cards is available at http://www.fujifilm.com/support/digital_cameras/compatibility/. Operation is not guaranteed with other cards. The camera can not be used with **xD-Picture Cards** or **MultiMediaCard** (MMC) devices.


📄 **Memory Cards**

- *Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card.* Failure to observe this precaution could damage the card.
- Format SD/SDHC/SDXC memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see “**FORMAT**” (📖 115).
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.

- miniSD or microSD adapters that are larger or smaller than the standard dimensions of an SD/SDHC/SDXC card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of SD/SDHC/SDXC memory card. Use a **CLASS10** card or better when shooting HD or high-speed movies.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.



Turning the Camera on and Off

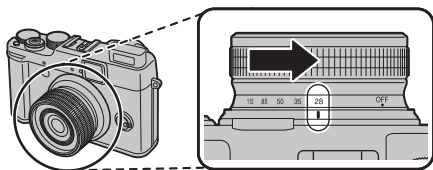To turn the camera on, rotate the zoom ring as shown.



Rotate the zoom ring to **OFF** to turn the camera off.


Switching to Playback Mode


Press the  button to start playback. Press  button again or press the shutter button halfway to return to shooting mode.



- If the zoom ring is not fully rotated to **OFF**, the battery will drain.
- Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.

Turning the Camera on in Playback Mode

To turn the camera on and begin playback, press the  button for about a second.

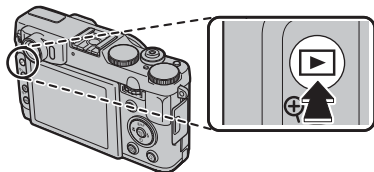



Press the  button again to turn the camera off.







The camera does not exit to shooting mode when pressing the shutter button.

Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected in the  **POWER MANAGEMENT > AUTO POWER OFF** menu ( 110). To reactivate the camera after it has turned off automatically, rotate the zoom ring to **OFF** and then turn the camera on.


Battery Level

Battery level is shown as follows:

Indicator	Description
 (white)	Battery partially discharged.
 (white)	Battery more than half discharged.
 (red)	Low battery. Charge as soon as possible.
 (blinks red)	Battery exhausted. Turn camera off and charge battery.

Basic Setup


A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 107).

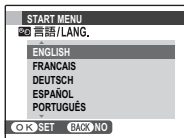

- 1 Highlight a language and press **MENU/OK**.



Press **DISP/BACK** to skip the current step. Any steps you skip will be displayed the next time the camera is turned on.

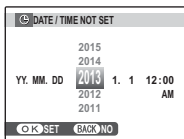

- 2 The date and time will be displayed. Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down. Press **MENU/OK** when settings are complete.

- 3 Power management options will be displayed. Press the selector up or down to highlight one of the following options and then press **MENU/OK**:

- **POWER SAVE**: Save battery power.
- **HIGH PERFORMANCE**: Choose for a brighter display and faster focus.

The Camera Clock

If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.



Taking Pictures

This section explains basic photography.

1 Select **SR+** mode.

Rotate the mode dial to **SR+** (ADVANCED SR AUTO). The following information will be displayed in the LCD monitor.

Scene Icon (📖 32)

The camera automatically selects the appropriate scene.



The **Face Icon**


In **SR+** mode, the camera continuously adjusts focus and searches for faces, increasing the drain on the battery. **Face** is displayed in the LCD monitor.



To raise the flash when lighting is poor, press the flash pop-up switch (📖 42).

2 Frame the picture.


Use the zoom ring to frame the picture in the display. The zoom indicator appears.

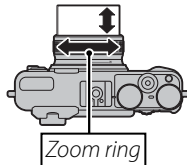

Zoom indicator



Focus Lock

Use focus lock ( 39) to focus on subjects that are not in the focus frame.

Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.



To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.



3 Focus.

Press the shutter button halfway to focus.



If the camera is able to focus, it will beep twice and the indicator lamp will glow green. If you are using the optical viewfinder, the focus indicator (📖 5) will be displayed.

If the camera is unable to focus, the focus frame will turn red, **!AF** will be displayed, and the indicator lamp will blink green. Change the composition or use focus lock (📖 39).


4 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.




📖 The Shutter Button


The shutter button has two positions. Pressing the shutter button halfway (①) sets focus and exposure; to shoot, press the shutter button the rest of the way down (②).

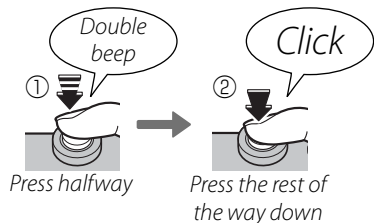


If the subject is poorly lit, the AF-assist illuminator may light to assist focus (📖 112). For information on using the flash when lighting is poor, see page 37.

Silent Mode

In situations in which camera sounds or lights may be unwelcome, hold the **DISP/BACK** button down until  is displayed.

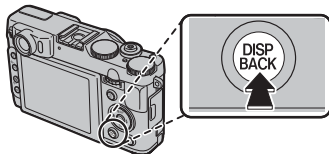

The camera speaker, flash, and AF-assist illuminator/self-timer lamp turn off and flash and volume settings can not be adjusted. To restore normal operation, press the **DISP/BACK** button until the  icon is no longer displayed.

The Indicator Lamp



The indicator lamp shows camera status as follows:

Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Blur, focus, or exposure warning. Picture can be taken.
Blinks green and orange	Recording pictures. Additional pictures can be taken.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange (Fast)	Flash charging; flash will not fire when picture is taken.
Blinks orange (Slow)	The zoom ring is positioned between ON and OFF. Picture cannot be taken.
Blinks red	Lens or memory error (memory card full or not formatted, format error, or other memory error).


Warnings

Detailed warnings appear in the display. See pages 128 for more information.

Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

- 1 Press the  button.

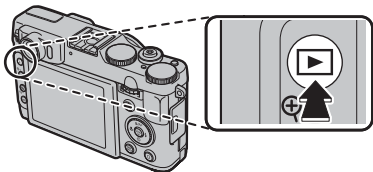

The most recent picture will be displayed in the monitor.




- 2 View additional pictures.

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode.


Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up ().




To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.

The Playback Menu

Pictures can also be deleted from the playback menu ( 65).

Shooting Mode

Choose a shooting mode according to the scene or type of subject. To choose a shooting mode, rotate the mode dial to the desired setting. The following modes are available:

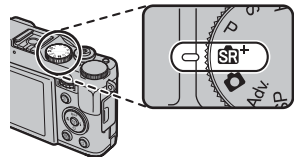

SR+ (ADVANCED SR AUTO): The camera automatically optimizes settings to the scene (📖 32).

📷 (AUTO): A simple “point-and-shoot” mode recommended for first-time users of digital cameras (📖 34).

Adv. (ADVANCED): Sophisticated techniques made easy (📖 34).

P, S, A, M: Select for full control over camera settings, including aperture (**M** and **A**) and/or shutter speed (**M** and **S**) (📖 28).

C1/C2 (CUSTOM): Recall stored settings for modes **P, S, A,** and **M** (📖 31).

🎬 (MOVIE): Shoot a movie with sound (📖 71).

SP (SCENE POSITION): Choose a scene suited to the subject or shooting conditions and let the camera do the rest (📖 38).

P: PROGRAM AE


In this mode, the camera sets exposure automatically. If desired, you can choose different combinations of shutter speed and aperture that will produce the same exposure (program shift).



If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "---". Press the shutter button halfway to measure exposure again.


Program Shift

Rotate the main/sub-command dial to choose the desired combination of shutter speed and aperture. The default values can be restored by raising the flash or turning the camera off. To use program shift, turn the flash off and select **OFF** for **[Fn] EXTERNAL FLASH**. Furthermore, an option other than **AUTO** must be selected for **[D-Ring] DYNAMIC RANGE** and **[ISO] ISO**.

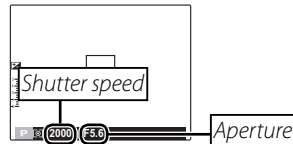

S: SHUTTER PRIORITY AE


Choose the shutter speed using the main/sub-command dial, while the camera adjusts aperture for optimal exposure.

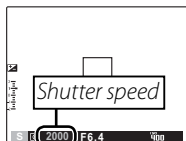

- If the correct exposure can not be achieved at the selected shutter speed, aperture will be displayed in red. Adjust shutter speed until the correct exposure is achieved. If the subject is outside the metering range of the camera, the aperture display will show "F---". Press the shutter button halfway to measure exposure again.
- The shutter speed is restricted depending on the ISO setting.

A: APERTURE PRIORITY AE


Choose the aperture using the main/sub-command dial, while the camera adjusts shutter speed for optimal exposure.

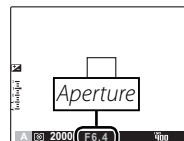


- If the correct exposure can not be achieved at the selected aperture, shutter speed will be displayed in red. Adjust aperture until the correct exposure is achieved. If the subject is outside the metering range of the camera, the shutter speed display will show "---". Press the shutter button halfway to measure exposure again.

M: MANUAL

 In this mode, you choose both shutter speed and aperture. If desired, exposure can be altered from the value suggested by the camera.

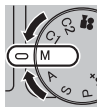

Rotate the main-command dial to set the shutter speed or aperture. Press the main-command dial to change the setting item between shutter speed and aperture.

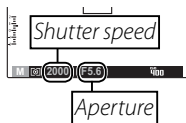

Rotating the main-command dial changes the setting marked with ◀ ▶.




- Noise in the form of randomly-spaced bright pixels may occur in long exposures.
- The shutter speed is restricted depending on the ISO setting.

Sub-command dial

When an option other than **MF** is selected for focus mode (p. 51), you can use the sub-command dial to set aperture or shutter speed.



- Rotating the sub-command dial changes the setting that is not marked with ◀ ▶.
- Press the main-command dial to change the setting item.

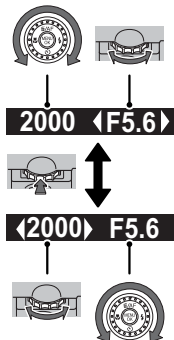


The Exposure Indicator



















The amount the picture will be under- or over-exposed at current settings is shown by the exposure indicator.

 

C1/C2: CUSTOM MODE

 In **P**, **S**, **A**, and **M** modes, the  **CUSTOM SET** option in the shooting menu (96) can be used to save current camera and menu settings. These settings are recalled whenever the mode dial is rotated to **C1/C2** (custom mode).



Menu/setting	Settings saved
Shooting menu	ISO ISO,  IMAGE SIZE ,  IMAGE QUALITY ,  DYNAMIC RANGE ,  FILM SIMULATION ,  COLOR ,  SHARPNESS ,  HIGHLIGHT TONE ,  SHADOW TONE ,  NOISE REDUCTION ,  INTELLIGENT DIGITAL ZOOM ,  FACE DETECTION ,  AF MODE ,  FLASH ,  EXTERNAL FLASH
Setup menu	 AF ILLUMINATOR
Other	Metering (AE), white balance (WB), burst/bracketing mode () , macro mode () , flash mode () , program shift, shutter speed, aperture, monitor display options (DISP/BACK)



Once the camera is turned off,  **INTELLIGENT DIGITAL ZOOM** is deactivated.

SR⁺ **ADVANCED SR AUTO**

When the mode dial is rotated to SR⁺, the camera automatically optimizes settings to suit the scene.



The scene is shown by an icon in the display.



The Scene Icon


Main subject \ Scene		AUTO	LAND-SCAPE	NIGHT	NIGHT (TRIPOD)	MACRO	BEACH	SUNSET	SNOW	SKY	GREEN-ERY	SKY & GREENERY
		Non-portrait	☉*	🌄	🌃*	🌃	🌸*	🌸	🌅	☁	❄	🌤
Portrait	Normal	👤	👤🌄	👤🌃	👤🌃	—	👤🌅	👤🌅	👤☁	👤🌤	👤🌿	👤🌿
	Backlit	👤	👤🌄	—	—	—	👤🌅	👤🌅	👤☁	👤🌤	👤🌿	👤🌿
Moving object		👤*	👤🌄	👤🌃*	👤🌃	👤🌸*	👤🌅	👤🌅	👤☁	👤🌤	👤🌿	👤🌿
Portrait and motion	Normal	👤	👤🌄	👤🌃	👤🌃	—	👤🌅	👤🌅	👤☁	👤🌤	👤🌿	👤🌿
	Backlit	👤	👤🌄	—	—	—	👤🌅	👤🌅	👤☁	👤🌤	👤🌿	👤🌿

* If ☉ is displayed, the camera will take a series of shots (advanced anti-blur; 33).





The mode selected may vary with shooting conditions. If the mode and subject do not match, select 📷 mode (34) or choose **SP** (38) and select a scene manually.

Advanced Anti Blur

When  is displayed, the camera will take a series of exposures and combine them to form a single image, reducing “noise” (mottling) and blur.



 is available when **ON** is selected in the shooting menu ( 93) and the flash ( 42) is off or set to auto.




Some time may be required to combine the exposures into a single image. A single combined image may not be created if the subject or camera moves during shooting. Keep the camera steady during shooting and do not move the camera until shooting is complete.








AUTO

Choose for crisp, clear snapshots. This mode is recommended in most situations.

Adv. ADVANCED


This mode combines “point-and-shoot” simplicity with sophisticated photographic techniques. The  **Adv. MODE** option in the shooting menu can be used to choose from the following advanced modes:















 Adv. MODE	
 ADVANCED FILTER	34
 MOTION PANORAMA 360	35
 PRO FOCUS	36
 PRO LOW-LIGHT	37
 MULTIPLE EXPOSURE	37

ADVANCED FILTER

Take photos with filter effects. Choose from the following filters.

Filter	Description
 TOY CAMERA	Choose for a retro toy camera effect.

Filter	Description
 MINIATURE	The tops and bottoms of pictures are blurred for a diorama effect.
 POP COLOR	Create high-contrast images with saturated colors.
 HIGH-KEY	Create bright, low-contrast images.
 LOW-KEY	Create uniformly dark tones with few areas of emphasized high-lights.
 DYNAMIC TONE	Dynamic tone expression is used for a fantasy effect.
 SOFT FOCUS	Create a look that is evenly soft throughout the whole image.
 PARTIAL COLOR (RED)	Areas of the image that are the selected color are recorded in that color. All others areas of the image are recorded in black-and-white.
 PARTIAL COLOR (ORANGE)	
 PARTIAL COLOR (YELLOW)	
 PARTIAL COLOR (GREEN)	
 PARTIAL COLOR (BLUE)	
 PARTIAL COLOR (PURPLE)	




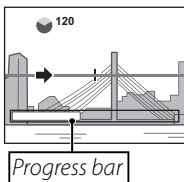
Depending on the subject and camera settings, images may in some cases be grainy or vary in brightness and hue.

■ MOTION PANORAMA 360

Follow an on-screen guide to take photos that will automatically be joined to form a panorama.



- 1 Rotate the zoom ring until the zoom indicator turns white ( 23).
- 2 To select the angle through which you will pan the camera while shooting, press the selector down. Press the selector left or right to highlight an angle and press **MENU/OK**.
- 3 Press the selector right to view a choice of pan directions. Press the selector left or right to highlight a pan direction and press **MENU/OK**.
- 4 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.
- 5 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the progress bar is full and the panorama is complete.





Shooting ends if the shutter button is pressed all the way down during shooting. No panorama will be recorded if the shutter button is pressed before the camera has been panned through 120°.







- Do not rotate the zoom ring during shooting.
- Panoramas are created from multiple frames. The camera may in some cases record a greater or lesser angle than selected or be unable to stitch the frames together perfectly. The last part of the panorama may not be recorded if shooting ends before the panorama is complete.
- Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.
- The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.




Choose  for seamless 360° panoramas that can be played back in a loop ( 70).



The  **SAVE DATA SET-UP > SAVE ORG IMAGE** option in the setup menu can be used to record a  panorama in addition to a seamless  panorama ( 113).



Depending on the subject and shooting conditions, the camera may produce distorted results or a  panorama. The top and bottom of the area visible in the shooting display are cropped out and white strips may appear at the top and bottom of the display.

For Best Results

For best results, move the camera in a small circle at a steady speed, keeping the camera horizontal and being careful only to pan in the direction shown by the guides. If the desired results are not achieved, try panning at a different speed.

PRO FOCUS

The camera takes up to three shots each time the shutter button is pressed, softening the background to emphasize the main subject. The amount of softening can be adjusted before shooting by rotating the main/sub-command dial. Use for portraits or photos of flowers similar to those produced by SLR cameras.



- Softening can not be applied to background objects that are too close to the main subject. If a message stating that the camera can not create the effect is displayed when the camera focuses, try backing away from your subject and zooming in. The camera may also be unable to soften the background if the subject is moving; if prompted, check the results and try again.
- Frame coverage is reduced.


■ PRO LOW-LIGHT

Each time the shutter button is pressed, the camera makes four exposures and combines them into a single photograph. Use to reduce noise and blur when photographing poorly lit subjects or static subjects at high zoom ratios.



A single combined photograph may not be created with some scenes or if the subject or camera moves during shooting. Do not move the camera until shooting is complete.

PRO FOCUS/PRO LOW-LIGHT

To save unprocessed copies of pictures taken in these modes, select **ON** for the  **SAVE DATA SET-UP** > **SAVE ORG IMAGE** option in the setup menu (📖 113).




Keep the camera steady during shooting.


■ MULTIPLE EXPOSURE

Create a photograph that combines two exposures.

















- 1 Take the first shot.
- 2 Press **MENU/OK**. The first shot will be shown superimposed on the view through the lens as a guide to taking the second shot.
 -  To return to Step 1 and retake the first shot, press the selector left. To save the first shot and exit without creating a multiple exposure, press **DISP/BACK**.
- 3 Take the second shot.
- 4 Press **MENU/OK** to create the multiple exposure, or press the selector left to return to Step 3 and retake the second shot.

SP SCENE POSITION

The camera offers a choice of “scenes,” each adapted to particular shooting conditions or a specific type of subject. Use the  **SCENE POSITION** option in the shooting menu to choose the scene assigned to the **SP** position on the mode dial.



Scene	Description
 PORTRAIT	Choose for portraits.
 PORTRAIT ENHANCER	Choose for a smooth skin effect when shooting portraits.
 LANDSCAPE	Choose for daylight shots of buildings and landscapes.
 SPORT	Choose when photographing moving subjects.
 NIGHT	Choose this mode for poorly lit twilight or night scenes.
 NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night.
 FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework.
 SUNSET	Choose this mode to record the vivid colors in sunrises and sunsets.
 SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 UNDERWATER	Reduces the blue cast typically associated with underwater lighting.
 PARTY	Capture indoor background lighting under low-light conditions.
 FLOWER	Choose for vivid close-ups of flowers.
 TEXT	Take clear pictures of text or drawings in print.

Focus Lock

To compose photographs with off-center subjects:

1 Position the subject in the focus frame.

2 Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).



3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



4 Shoot.



Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock to focus on another subject at the same distance and then recompose the photograph.

- Very shiny subjects such as mirrors or car bodies.
- Fast-moving subjects.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

The AEL/AFL Button

The **AEL/AFL** button can be used to lock exposure or focus.

Locking Exposure

1 Meter exposure.

Position the subject in the focus frame and press the **AEL/AFL** button to meter exposure.



2 Focus.

Keeping the **AEL/AFL** button pressed, press the shutter button halfway to focus. Focus and exposure will remain locked while the shutter button is pressed halfway, even if you later release the **AEL/AFL** button.



Repeat steps 1 and 2 as desired to refocus before taking the picture.

3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



Adjusting zoom ends AE lock. AE lock is not available with Intelligent Face Detection.

4 Shoot.



Locking Focus


If **AF LOCK ONLY** is selected for **AE/AFL AE/AF-LOCK BUTTON** in the setup menu (📖 112), pressing the **AEL/AFL** button locks focus. If **AE/AF LOCK** is selected, both focus and exposure will be locked.






If **AE&AF ON/OFF SWITCH** is selected for **AE-L AE/AF-LOCK MODE** in the setup menu (📖 112), exposure and/or focus will lock when the **AEL/AFL** button is pressed and remain locked until the button is pressed again.

Macro and Super Macro Modes (Close-ups)

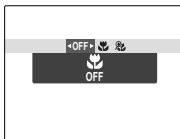


 


For close-ups, press the selector left () to choose from the macro options shown below.



Choose from  (macro mode),
 (super macro mode), or
OFF (macro mode off)

When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom ring to compose pictures. The following restrictions apply in super macro mode: the lens must be zoomed all the way out (at other zoom positions, ) and the flash can not be used.




- Use of a tripod is recommended to prevent blur caused by camera shake.
- Flash compensation may be required when using the flash ( 95).
- Using the flash at close range may cast a lens shadow. Zoom a little or have more distance from the subject.
- In macro mode, pictures are framed in the monitor, regardless of the option selected for  **OVF/LCD SETTING** ( 96). The "INFO DISPLAY" and "INFORMATION1 ON" displays automatically switch to "INFORMATION2 ON" ( 9).
- Use of the LCD monitor is recommended to avoid parallax at close range.
- The camera can focus at short range when macro mode is not set, but the time needed to focus increases.
- Rotate the zoom ring until the zoom indicator turns white when using  ( 23).

⚡ Using the Flash (Super-Intelligent Flash)

When the flash is used, the camera's *Super-Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

1 Raise the flash.



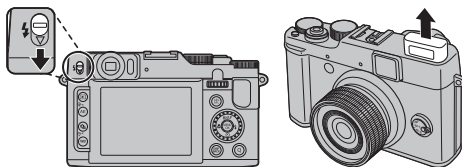


Slide the flash pop-up switch to raise the flash.



2 Choose a flash mode.

Press the selector right (⚡). The flash mode changes each time the selector is pressed.



Mode	Description
AUTO /  (AUTO FLASH)	The flash fires when required. Recommended in most situations.
 /  (FORCED FLASH)	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.
 /  (SLOW SYNCHRO)	Capture both the main subject and the background under low light (note that brightly lit scenes may be overexposed).







The flash may fire several times with each shot. Do not move the camera until shooting is complete.



- The peripheral part of an image may be dark when using the flash.
- Remove lens hoods to prevent shadows in photos taken with the flash.


●● Red-Eye Removal


When Intelligent Face Detection is active (📖 58), and **ON** is selected for  **REDEYEREMOVAL** in the setup menu (📖 111), red-eye removal is available in  **AUTO**,  **⚡**, and  **SLOW**.

Red-eye removal minimizes “*red-eye*” caused when light from the flash is reflected from the subject’s retinas as shown in the illustration at right.




●● Turning the Flash Off

Lower the flash where flash photography is prohibited or to capture natural lighting under dim light. At slow shutter speeds,  will be displayed to warn that pictures may be blurred; use of a tripod is recommended.

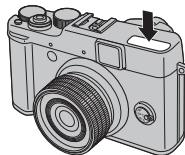

🕒 Using the Self-Timer


To use the self-timer, press the selector down (🕒) and choose from the following options:

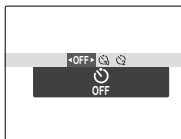




Option	Description
🕒 (OFF)	Self-timer off.
🕒 (10 SEC)	The shutter is released ten seconds after the shutter button is pressed. Use for self-portraits. The self-timer lamp on the front of the camera lights when the timer starts and begins to blink shortly before the photo is taken.
🕒 (2 SEC)	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter button is pressed. The self-timer lamp will blink as the timer counts down.

Continuous Shooting (Burst Mode/Bracketing)


 

Capture motion or automatically vary selected settings over a series of pictures.

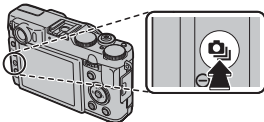Press the  button and choose from the following options:



-  : STILL IMAGE
-  : TOP
-  : BEST FRAME CAPTURE
-  : AE BKT
-  : ISO BKT
-  : FILM SIMULATION BKT
-  : DYNAMIC RANGE BKT







- Focus and exposure are determined by the first frame in each series. The flash turns off automatically; the previously-selected flash mode is restored when continuous shooting is turned off.
- Frame rate varies with shutter speed.
- The number of pictures that can be taken in a single burst varies with the scene and camera settings. The number of pictures that can be recorded depends on the memory available.
- Use of the viewfinder is recommended to view the subject directly with no display lag.
- If  is selected in  or , pictures will be recorded at size **M** or smaller.

■ TOP

The camera takes photographs while the shutter button is pressed.

- 1 Press the selector right or left to choose the frame rate.

Option	Max frame rate
	12 fps
	9.0 fps
	6.0 fps
	3.0 fps

The frame rate varies depending on the shooting conditions or numbers of frames in continuous shooting.


- 2 Press **MENU/OK** to return to shooting mode when settings are complete.

■ BEST FRAME CAPTURE

The camera takes a series of pictures, starting before and ending after the shutter button is pressed. To choose the frame rate and number of shots:


- 1 Press the selector right when the camera is in shooting mode.
- 2 Highlight the current frame rate and press the selector right, then press selector up or down to choose a new value and press **MENU/OK** to select.

- 3** Highlight the number of shots and press the selector right. Press the selector left or right to choose how the shots are distributed (the number on the left is taken *before* and the number on the right *after* the shutter button is pressed). Press **MENU/OK** when settings are complete.

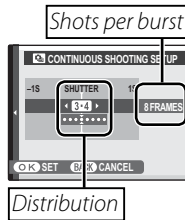

- 4** Press **DISP/BACK** to return to shooting mode.

- 5** Take photographs. The camera begins recording while the shutter button is pressed halfway, and completes the burst when the shutter button is pressed all the way down. The illustration shows a burst of eight shots, three before the shutter button is pressed and four after.

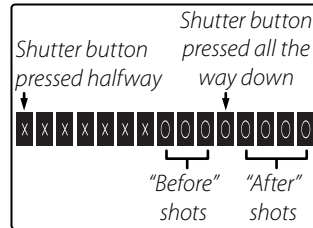

- If the shutter button is pressed all the way down before the number of frames selected for the “before” portion is recorded, the remaining frames will be taken after the shutter button is pressed all the way down.
- If the shutter button is pressed halfway for an extended period, the camera may record the burst before the shutter button is pressed all the way down.

AE BKT

Press the selector left or right to highlight a bracketing amount. Each time the shutter button is pressed, the camera will take three shots: one using the metered value for exposure, the second overexposed by the selected amount, and the third underexposed by the same amount (the camera may not be able to use the selected bracketing increment if the amount of over- or under- exposure exceeds the limits of the exposure metering system).

ISO ISO BKT

Press the selector left or right to highlight a bracketing amount. Each time the shutter is released, the camera will take a picture at the current sensitivity (89) and process it to create two additional copies, one with sensitivity raised and the other with sensitivity lowered by the selected amount (regardless of the amount selected, sensitivity will not exceed ISO 1600 or fall below ISO 200).

FILM SIMULATION BKT

Each time the shutter is released, the camera takes one shot and processes it to create copies with the film simulation settings selected for **FILM SIMULATION BKT** in the shooting menu (92).


DR DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots at different **DYNAMIC RANGE** settings (91): **100%** for the first, **200%** for the second, and **400%** for the third (**ISO ISO** is restricted to values between 400 and 3200).


Exposure Compensation

Use exposure compensation when photographing very bright, very dark, or high-contrast subjects.

Rotate the exposure compensation dial.

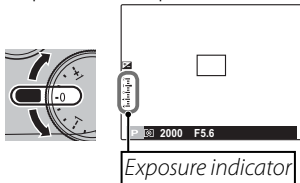


The effect is visible in the display.

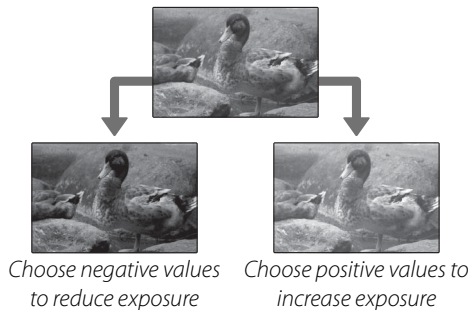

Metering


To choose how the camera meters exposure, press the **AE** button and then choose from the following options.

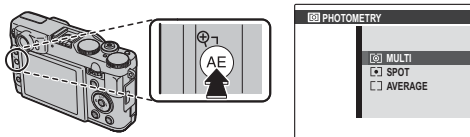

Option	Description
<input checked="" type="checkbox"/> (MULTI)	Automatic scene recognition is used to adjust exposure for a wide range of shooting conditions.
<input type="checkbox"/> (SPOT)	The camera meters lighting conditions at the center of the frame. Recommended when the background is much brighter or darker than the main subject.
<input type="checkbox"/> (AVERAGE)	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

Focus Mode

Use the focus mode selector to choose how the camera focuses.

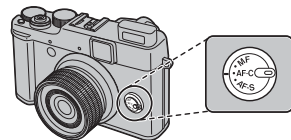


The following options are available:

Mode	Description
AF-S (SINGLE AF)	Focus locks while the shutter button is pressed halfway. Choose for stationary subjects.
AF-C (CONTINUOUS AF)	The camera continually adjusts focus to reflect changes in the distance to the subject even when the shutter button is not pressed halfway (note that this increases the drain on the battery). Choose for moving subjects.



MF
(MF)

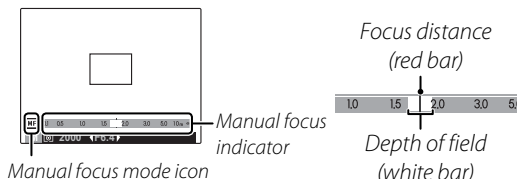Focus manually using the sub-command dial. Rotate the sub-command dial left to reduce the focus distance, right to increase. The manual focus indicator indicates how closely the focus distance matches the distance to the subject in the focus brackets (the red bar indicates the focus distance, the white bar the depth of field, or in other words the distance in front of and behind the focus point that appears to be in focus). Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus (📖 39). Intelligent Face Detection turns off automatically.



The outlines with the most contrast at the current focus distance can be viewed by selecting **FOCUS PEAK HIGHLIGHT** for **MF** **MF ASSIST** (📖 94).

Manual Focus

- Use of a tripod is recommended. Focus may be affected if the camera moves.
- Use the  **FOCUS CONTROL DIAL** option in the setup menu (📖 108) to reverse the direction of rotation of the sub-command dial.
- The camera will not focus if the sub-command dial is rotated past infinity.
- To focus using autofocus, press the **AEL/AFL** button. This can be used to quickly focus on a chosen subject in manual focus mode.
- The camera can show focus distance in meters or feet. Use the  **FOCUS SCALE UNITS** option in the setup menu (📖 114) to choose the units used.



MF FOCUS CHECK



If **ON** is selected for **MF FOCUS CHECK** in the setup menu (📖 108), rotating the sub-command dial magnifies the view in the LCD monitor.




To scroll to other areas of the frame, press the selector up and then use the selector or sub-command dial, or press **DISP/BACK** to return to the center of the frame. Press **MENU/OK** to resume normal operation when the desired area is displayed.




Focus Frame Selection

When  **AREA** is selected for  **AF MODE** in the shooting menu and **AF-S** is selected for focus mode, the camera offers a choice of focus points, allowing photographs to be composed with the main subject positioned almost anywhere in the frame. To position the focus frame, press the selector up and then use the selector or sub-command dial (the focus frame can be returned to the center by pressing **DISP/BACK**). Press **MENU/OK** button again to put the setting into effect.

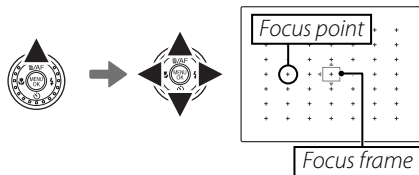

Disable intelligent face detection (📖 58) when using manual focus-frame selection.



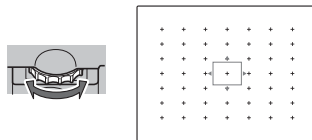






When framing pictures in the monitor, you can choose the size of the focus frame by rotating the main command dial. Rotate the dial left to reduce the frame by up to 50%, right to enlarge it by up to 150%, or press the center of the dial to restore the frame to its original size. Press **MENU/OK** to put the setting into effect.



White Balance

   
For natural colors, press the **WB** button and choose a setting that matches the light source.




Option	Description
AUTO	White balance adjusted automatically.
	Measure a value for white balance.
	Selecting this option displays a list of color temperatures (see 56); highlight a temperature and press MENU/OK .
	For subjects in direct sunlight.
	For subjects in the shade.
	Use under "daylight" fluorescent lights.
	Use under "warm white" fluorescent lights.
	Use under "cool white" fluorescent lights.
	Use under incandescent lighting.
	Reduces the blue cast typically associated with underwater lighting.

To fine-tune white balance, highlight an option and press **MENU/OK**. Use the selector to adjust white balance or press **DISP/BACK** to use the default white balance value.

 **Custom White Balance**


Choose  to adjust white balance for unusual lighting conditions. White balance measurement options will be displayed; frame a white object so that it fills the LCD monitor and press the shutter button all the way down to measure white balance (to select the most recent custom value and exit without measuring white balance, press **DISP/BACK**, or press **MENU/OK** to select the most recent value and display the fine-tuning dialog).

- If **“COMPLETED!”** is displayed, press **MENU/OK** to set white balance to the measured value.
- If **“UNDER”** is displayed, raise exposure compensation ( 49) and try again.
- If **“OVER”** is displayed, lower exposure compensation and try again.



For greater precision, adjust  **FILM SIMULATION**,  **ISO**, and  **DYNAMIC RANGE** before measuring white balance.



- White balance is adjusted for flash lighting only in **AUTO** and  modes. Turn the flash off using other white balance options.
- Results vary with shooting conditions. Play pictures back after shooting to check colors in the LCD monitor.

K: Color Temperature

Color temperature is an objective measure of the color of a light source, expressed in Kelvin (K). Light sources with a color temperature close to that of direct sunlight appear white; light sources with a lower color temperature have a yellow or red cast, while those with a higher color temperature are tinged with blue. You can match color temperature to the light source as shown in the following table, or choose options that differ sharply from the color of the light source to make pictures “warmer” or “colder”.

◀ *Choose for redder light sources
or “colder” pictures*

*Choose for bluer light sources
or “warmer” pictures* ▶

2,000K

5,000K

15,000K

Candlelight

Direct sunlight

Blue sky


Sunset/sunrise

Shade

Choosing the Role of the Fn Button

The role played by the **Fn** button can be selected using the **Fn Fn BUTTON** option in the shooting menu (📖 94). The following options are available:

ISO (📖 89)/**IMAGE SIZE** (📖 90)/**IMAGE QUALITY** (📖 91)/
DYNAMIC RANGE (📖 91)/**FILM SIMULATION** (📖 92)/**AF MODE** (📖 94)/
FACE DETECTION (📖 93)/**INTELLIGENT DIGITAL ZOOM** (📖 93)/
OVF/LCD SETTING (📖 115)/**RAW** (📖 59).

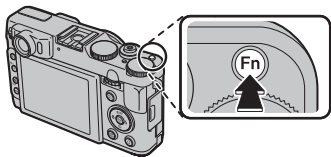

Press the **Fn** button for about a second, **Fn Fn BUTTON** option can be displayed.

Intelligent Face Detection

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits (in horizontal or vertical orientations) to prevent the camera from focusing on the background.

To use Intelligent Face Detection, press **MENU/OK** to display the shooting menu and select **ON** for  **FACE DETECTION**.

Faces can be detected with the camera in vertical or horizontal orientation; if a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.



Green border



- In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.
- If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

Intelligent Face Detection


Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (📖 44).



When a picture taken with Intelligent Face Detection is displayed, the camera can automatically select faces for red-eye removal (📖 102), playback zoom (📖 63), slide shows (📖 100), image search (📖 67), image disp. (📖 109), printing (📖 80), and cropping (📖 103).

Recording Pictures in RAW Format

To toggle RAW image quality on or off for a single shot, assign **RAW** to the **Fn** button (☞ 57). If a JPEG option is currently selected for image quality, pressing the **Fn** button temporarily selects the equivalent JPEG+RAW option. If a JPEG+RAW option is currently selected, pressing the **Fn** button temporarily selects the equivalent JPEG option, while if **RAW** is selected, pressing the **Fn** button temporarily selects **FINE** (☞ 91). Taking a picture or pressing the **Fn** button again restores the previous setting.

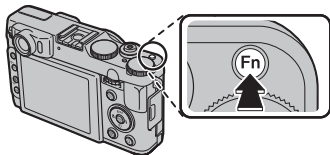


RAW images record raw, unprocessed data from the camera image sensor. JPEG copies of RAW images can be created using the **RAW** **RAW CONVERSION** option in the playback menu, or RAW images can be viewed on a computer using the RAW FILE CONVERTER application that is installed with the software on the supplied CD.



- RAW pictures cannot be recorded to internal memory. Insert a memory card.
- Crop, resize, and red-eye removal options are not available with RAW images during playback, while the maximum available zoom ratio is restricted.

The Q (Quick Menu) Button

Press **Q** for quick access to the following items. For more information on the options available, see the pages listed below.

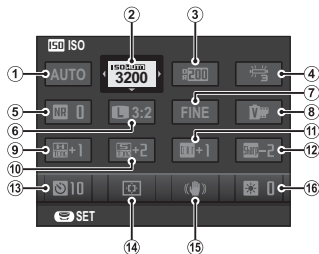


1	Shooting Mode27	9	HIGHLIGHT TONE93
2	ISO89	10	SHADOW TONE93
3	DYNAMIC RANGE91	11	COLOR93
4	WHITE BALANCE54	12	SHARPNESS93
5	NOISE REDUCTION93	13	SELF-TIMER44
6	IMAGE SIZE90	14	AF MODE94
7	IMAGE QUALITY91	15	DUAL IS MODE111
8	FILM SIMULATION92	16	LCD BRIGHTNESS109



Shooting mode selection can not be performed from the quick menu. The options available in the quick menu vary with the shooting mode selected.

1 Press **Q** to display the quick menu during shooting.

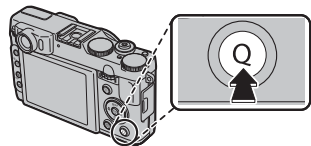

2 Use the selector to highlight items and rotate the main/sub-command dial to change.



3 Press **Q** to exit when settings are complete.



Movie Mode


In movie mode, the quick menu contains the following items:

-  **MOVIE MODE**
-  **WHITE BALANCE**
-  **FILM SIMULATION**
-  **LCD BRIGHTNESS**





Playback Options

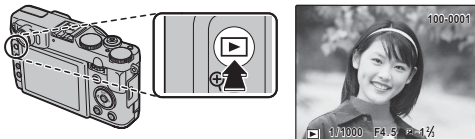To view the most recent picture in the monitor, press the  button.



Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame. Rotate the sub-command dial to view other images.



 Pictures taken using other cameras are indicated by a  ("gift image") icon during playback.

Continuous Shooting


In the case of pictures taken in continuous shooting mode, only the first frame of each series will be displayed. Press the selector down to view the other pictures in the series.

★ Favorites: Rating Pictures

To rate the picture currently displayed in full-frame playback, press **DISP/BACK** and press the selector up and down to select from zero to five stars.

Playback Zoom

Press **Q** to zoom in on pictures displayed in single-frame playback; **Q** to zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

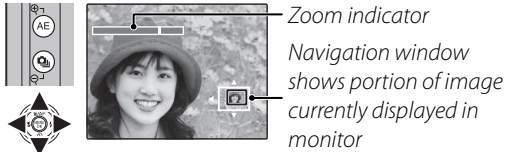

Press **DISP/BACK** or **MENU/OK** to exit zoom.




The maximum zoom ratio varies with image size. Playback zoom is not available with cropped or resized copies saved at a size of **640** or smaller.


Intelligent Face Detection

Pictures taken with Intelligent Face Detection (📖 58) are indicated by a **👤** icon. Press the **▼** button to zoom in on the subject selected with Intelligent Face Detection. You can then use the **Q** and **Q** buttons to zoom in and out.


Multi-Frame Playback


To change the number of images displayed, press  in single-frame view.


Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.

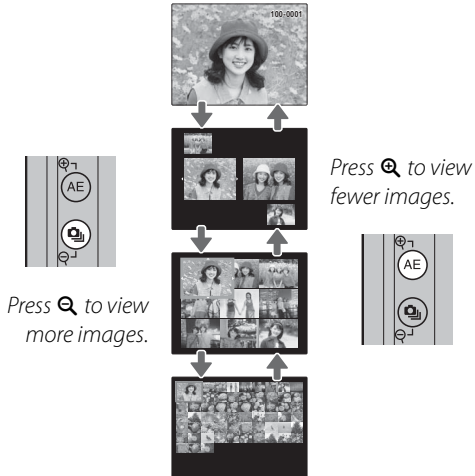



Deleting Pictures

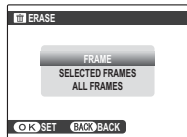To delete individual pictures, multiple selected pictures, or all pictures, press the selector up () and choose from the options below. *Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.*




Option	Description
FRAME	Press the selector left or right to scroll through pictures and press MENU/OK to delete the current picture (a confirmation dialog is not displayed).
SELECT FRAMES	Highlight pictures and press MENU/OK to select or deselect (pictures included in the photobook or print order are shown by ). When the operation is complete, press DISP/BACK to display a confirmation dialog, then highlight OK and press MENU/OK to delete the selected pictures.
ALL FRAMES	A confirmation dialog will be displayed; highlight OK and press MENU/OK to delete all unprotected pictures (if a memory card is inserted, only the pictures on the memory card will be affected; the pictures in internal memory are only deleted if no memory card is inserted). Pressing DISP/BACK cancels deletion; note that any pictures deleted before the button was pressed can not be recovered.



- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete ( 102).
- Pictures can also be deleted by  **ERASE** from playback menu.
- If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

Viewing Photo Information

Additional photo information can be viewed by rotating the main-command dial. Rotate the main-command dial to cycle the display.

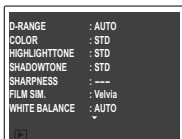

The active focus point is shown by a “+” icon.


Zooming in on the Focus Point

Press the main-command dial to zoom in on the focus point. Press the main-command dial again to return to full-frame playback.






Image Search

Search for images by various criteria.

- 1 Select  **IMAGE SEARCH** in the playback menu (📖 99), highlight one of the following search criteria, and press **MENU/OK**:

Option	Description
BY DATE	Find all pictures taken on a selected date.
BY FACE	Find all pictures based on specified face information.
BY ★ FAVORITES	Find all pictures with a specified rating (📖 62).
BY SCENE	Find all pictures that match a selected scene.
BY TYPE OF DATA	Find all still pictures, all movies, all pictures taken in burst mode, or all RAW pictures.
BY UPLOAD MARK	Find all pictures selected for upload to a specified destination (📖 99).


- 2 Select a search condition. Only pictures that match the search condition will be displayed. To delete or protect selected pictures or to view the selected pictures in a slide show, press **MENU/OK** and choose from the following options:

Option	See page
 ERASE	65
 PROTECT	102
 SLIDE SHOW	100

PhotoBook Assist

Create books from your favorite photos.

Creating a PhotoBook

1 Select  **PHOTOBOOK ASSIST** in the playback menu.

2 Highlight **NEW BOOK**.



3 Press **MENU/OK** to display the new book dialog.



4 Choose pictures for the new book.

- **SELECT FROM ALL:** Choose from all the pictures available.
- **SELECT BY IMAGE SEARCH:** Choose from pictures matching selected search conditions (67).



Neither photographs **640** or smaller nor movies can be selected for photobooks.

5 Scroll through the images and press the selector up to select or deselect the current image for inclusion in the book. To display the current image on the cover, press the selector down.




The first picture selected automatically becomes the cover image. Press the selector down to select a different picture for the cover.

6 Press **MENU/OK** to exit when the book is complete.



7 Highlight **COMPLETE PHOTOBOOK**.

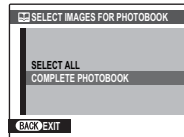

Choose **SELECT ALL** to select all photos, or all photos matching the specified search conditions, for the book.

8 Press **MENU/OK**. The new book will be added to the list in the photobook assist menu.



- Photobooks can contain up to 300 pictures.
- Books that contain no photos are automatically deleted.


PhotoBooks

Photobooks can be copied to a computer using the supplied MyFinePix Studio software.

Viewing PhotoBooks


Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the selector left and right to scroll through the pictures. Press **DISP/BACK** to return to the photobook assist menu.

Editing and Deleting PhotoBooks



- 1** Display the photobook and press **MENU/OK** to view book edit options. 
- 2** Choose from the following options:
 - **EDIT:** Edit the book as described in “Creating a PhotoBook” on page 68.
 - **ERASE:** Delete the current photobook.
- 3** Follow the on-screen instructions.

Viewing Panoramas

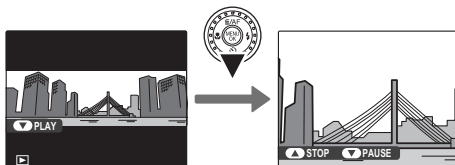
If you press the selector down when a panorama is displayed full frame, the camera will play back the picture from left to right or from bottom to top.




The following operations can be performed during playback:


Operation	Button	Description
Start/pause playback		Press the selector down to start playback. Press again to pause.
End playback		Press the selector up to end playback.




- Once displayed in full-frame playback, panoramas can be zoomed in or out using the zoom buttons.
-  panoramas play back in an endless loop (📖 36); the playback direction can be controlled by pressing the selector left or right. The camera will not turn off automatically while playback is in progress (📖 110).


 




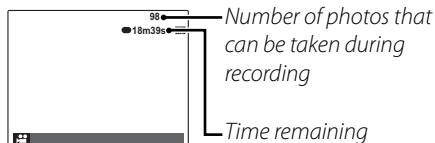

Recording Movies

Shoot short movies with sound. During recording,  and the time remaining will be displayed in the LCD monitor and sound will be recorded via the built-in microphone (be careful not to cover the microphone during recording).



- 1 Rotate the mode dial to  **MOVIE**.
- 2 Press the shutter button all the way down to start recording.
- 3 To end recording, press the shutter button again. Recording ends automatically when the movie reaches maximum length or memory is full.

Automatic Scene Selection

If **ON** is selected for  **SCENE RECOGNITION** (🗨️ 97), the camera will select the scene according to shooting conditions and the type of subject:  (portraits),  (poorly-lit landscapes),  (poorly-lit portraits),  (landscapes),  (close-ups),  (backlit portraits), or  (other subjects).



Scene icon



- Zoom can be adjusted while recording is in progress.
- If the subject is poorly lit, the AF-assist lamp may light to assist the focus operation. To turn the AF-assist lamp off, select **OFF** for **AF ILLUMINATOR** in the setup menu (📖 112).
- Focus, exposure, and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.
- Sounds made by the camera may be recorded.

Taking Photographs During Recording

Press **MENU/OK** to take a photograph during recording.



- The method used to record photographs can be selected using the **STILL SHOOTING IN MOVIE** option (📖 97).
- The photo is saved separately from the movie and does not appear as part of the movie.



- Photos can not be taken while a high-speed movie is being recorded.
- The number of photos that can be taken is limited.



- The indicator lamp lights while movies are being recorded. Do not open the battery chamber during shooting or while the indicator lamp is lit. Failure to observe this precaution could prevent the movie from being played back.
- Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.
- The temperature of the camera may rise if it is used to record movies for an extended period or if the ambient temperature is high. This is normal and does not indicate a malfunction.
- The mode selected may vary with shooting conditions.
- Note that in **AF-C** mode, the camera focuses continuously, increasing the drain on the battery, and that the sound of the camera focusing may be audible.


Movie Frame Size

Before recording, select a frame size using the **MOVIE MODE** option in the shooting menu (97).

Option	Description
FULL HD 1920 × 1080 (60fps)	Full HD (High Definition).
HD 1280 × 720 (60fps)	High Definition.
640 640 × 480 (30fps)	Standard definition.
HS 640 × 480 (80fps)	High speed movie. Sound is not recorded, and focus, exposure, and white balance are not adjusted automatically. Black bands appear at the top and bottom of movies recorded at HS 320 × 112 .
HS 320 × 240 (150fps)	
HS 320 × 112 (250fps)	

Using an External Microphone


The camera can be used with optional MIC-ST1 stereo microphones using the cable supplied with the MIC-ST1. See the microphone manual for details.

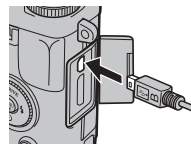

Recording level can be adjusted using **MIC LEVEL ADJUSTMENT** (97).

▶ Viewing Movies


During playback (62), movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:

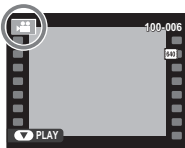

Operation	Description
Start/ pause playback	Press the selector down to start playback. Press again to pause. While playback is paused, you can press the selector left or right to rewind or advance one frame at a time.
End playback/ delete	Press the selector up to end playback.
Adjust speed	Press the selector left or right to adjust playback speed during playback.
Adjust volume	Press MENU/OK to pause playback and display volume controls. Press the selector up or down to adjust the volume and press MENU/OK to exit. Volume can also be adjusted from the setup menu.

▶ Playback Speed

Press the selector left or right to adjust playback speed. Speed is shown by the number of arrows (▶ or ◀).

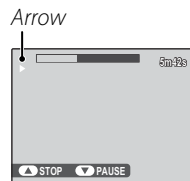

▶ Viewing Movies on a Computer

Copy movies to the computer before viewing.




Do not cover the speaker during playback.

Viewing Pictures on High-Definition TVs


The camera can be connected to High-Definition (HD) devices using an HDMI cable (available separately from third-party sources).

- 1 Turn the camera off and connect the HDMI cable as shown below.

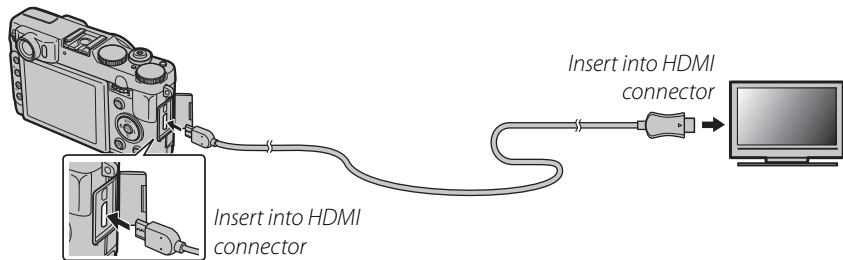

- When connecting the cable, be sure the connectors are fully inserted.
- When an HDMI cable is connected, pictures and sound are played back on the TV.

- 2 Tune the television to HDMI input channel. See the documentation supplied with the television for details.

- 3 Press the  button for about a second to turn the camera on. The camera monitor turns off and pictures and movies are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.



- The USB cable can not be used while an HDMI cable is connected.
- Some televisions may briefly display a black screen when movie playback begins.


Printing Pictures via USB



If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.




Connecting the Camera

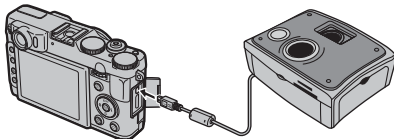- 1 Connect the supplied USB cable as shown and turn the printer on.




- 2 Press the  button for about a second to turn the camera on.  **USB** will be displayed in the monitor, followed by the PictBridge display shown below at right.

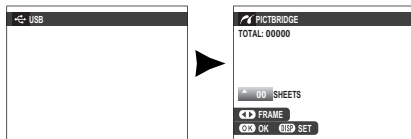


Printing Selected Pictures

- 1 Press the selector left or right to display a picture you wish to print.
- 2 Press the selector up or down to choose the number of copies (up to 99).
- 3 Repeat steps 1–2 to select additional pictures. Press **MENU/OK** to display a confirmation dialog when settings are complete.

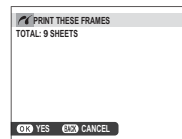

- 4 Press **MENU/OK** to start printing.



Printing the Date of Recording

To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see “Printing the DPOF Print Order,” below). Press the selector up or down to highlight **PRINT WITH DATE**  and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**).





If no pictures are selected when the **MENU/OK** button is pressed, the camera will print one copy of the current picture.


Printing the DPOF Print Order

To print the print order created with  **PRINT ORDER (DPOF)** in the playback menu ( 105):

- 1 In the PictBridge display, press **DISP/BACK** to open the PictBridge menu.

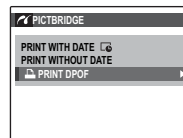

- 2 Press the selector up or down to highlight  **PRINT DPOF**.
- 3 Press **MENU/OK** to display a confirmation dialog.

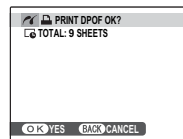


- 4 Press **MENU/OK** to start printing.

During Printing

The message shown at right is displayed during printing. Press **DISP/BACK** to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).


If printing is interrupted, turn the camera off and then on again.

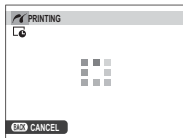


Disconnecting the Camera

Confirm that "PRINTING" is not displayed in the monitor and turn the camera off. Disconnect the USB cable.




- Pictures can be printed from internal memory or a memory card that has been formatted in the camera.
- If the printer does not support date printing, the **PRINT WITH DATE**  option will not be available in the PictBridge menu and the date will not be printed on the pictures in the DPOF print order.
- When pictures are printed via direct USB connection, page size, print quality, and border selections are made using the printer.



Creating a DPOF Print Order

The  **PRINT ORDER (DPOF)** option in the playback menu can be used to create a digital “print order” for PictBridge-compatible printers (📖 116) or devices that support DPOF.


DPOF

DPOF (Digital Print Order Format) is a standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed, date im-
 print, and the number of copies of each picture.

■ **WITH DATE /WITHOUT DATE**

- 1** Select playback mode and press **MENU/OK** to display the playback menu.
- 2** Highlight  **PRINT ORDER (DPOF)** and press **MENU/OK**.
- 3** Highlight one of the following options and press **MENU/OK**:
 - **WITH DATE **: Print the date of recording on pictures.
 - **WITHOUT DATE**: Do not print the date of recording on pictures.
- 4** Press the selector left or right to display a picture you wish to include in or remove from the print order.

- 5** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.

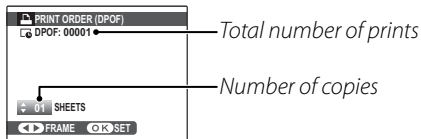

Intelligent Face Detection


If the current picture was created with Intelligent Face Detection, pressing ▼ sets the number of copies to the number of faces detected.



When pictures are printed via direct USB connection, page size, print quality, and border selections are made using the printer.

- 6** Repeat steps 4–5 to complete the print order. Press **MENU/OK** to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.

- 7** The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.

The pictures in the current print order are indicated by a  icon during playback.






- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above.



■ **RESET ALL**

To cancel the current print order, select **RESET ALL** in the **PRINT ORDER (DPOF)** menu. The confirmation shown at right will be displayed; press **MENU/OK** to remove all pictures from the order.

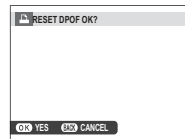

Viewing Pictures on a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install the software as described below. **Do not connect the camera to the computer until installation is complete.**

Windows: Installing MyFinePix Studio

1 Confirm that the computer meets the following system requirements:

	Windows 8/Windows 7 (SP 1)/Windows Vista (SP 2) ¹	Windows XP (SP 3) ¹
CPU	3 GHz Pentium 4 or better (2.4 GHz Core 2 Duo or better) ²	2 GHz Pentium 4 or better (2.4 GHz Core 2 Duo or better) ²
RAM	1 GB or more	512 MB or more (1 GB or more) ²
Free disk space	2 GB or more	
GPU	Supports DirectX 9 or later (recommended)	Supports DirectX 7 or later (required; performance not guaranteed with other GPUs)
Video	1,024 × 768 pixels or more with 24-bit color or better	
Other	<ul style="list-style-type: none">• Built-in USB port recommended. Operation is not guaranteed with other USB ports.• .NET Framework 3.5 Service Pack 1 required when uploading images or using Map Viewer.• Internet connection (broadband recommended) required to install .NET Framework (if necessary), to use auto update feature, and when performing such tasks as sharing pictures on-line or via e-mail.	

¹ Other versions of Windows are not supported. Only pre-installed operating systems are supported; operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

² Recommended when displaying HD movies.

2 Start the computer. Log in to an account with administrator privileges before proceeding.

- 3 Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

 **Windows 8/Windows 7/Windows Vista**

If an AutoPlay dialog is displayed, click **SETUP.EXE**. A “User Account Control” dialog will then be displayed; click **Yes** (Windows 8/Windows 7) or **Allow** (Windows Vista).

The installer will start automatically; click **Install MyFinePix Studio** and follow the on-screen instructions to install MyFinePix Studio and RAW FILE CONVERTER.

 **If the Installer Does Not Start Automatically**

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu, then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **setup** or **SETUP.EXE**.

 **If the Installer Does Not Start Automatically (Windows 8)**

- 1 Select **Desktop** on the Start screen.
- 2 Select **File Explorer** on the taskbar.
- 3 Select **Computer** in the navigation pane.
- 4 Double-click the drive icon inserting the **FINEPIX** CD and follow the on-screen instructions to install.

- 4 If prompted to install Windows Media Player or DirectX, follow the on-screen instructions to complete installation.
- 5 Remove the installer CD from the CD-ROM drive when installation is complete. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.

Installation is now complete. Proceed to “Connecting the Camera” on page 86.

Macintosh: Installing RAW FILE CONVERTER

RAW FILE CONVERTER is used to view RAW images on your computer.

- 1 Confirm that the computer meets the following system requirements:

CPU	Intel (Core 2 Duo or better)
OS	Pre-installed versions of Mac OS X version 10.6–10.8 (visit http://www.fujifilm.com/support/digital_cameras/compatibility/ for more information).
RAM	1 GB or more
Free disk space	A minimum of 200 MB required for installation with 400 MB available when RAW FILE CONVERTER is running
Video	1,024 × 768 pixels or more with 24-bit color or better

- 2 After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive and double-click **SILKYRFCEXInstaller**.
- 3 Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install. Click **Exit** to quit the installer when installation is complete.
- 4 Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.

Installation is now complete. Proceed to “Connecting the Camera” on page 86.

Importing Pictures or Movies to Mac (Macintosh)

Use a standard application in Mac OS such as Image Capture to import pictures or movies to Mac.

Connecting the Camera

- 1** If the pictures you wish to copy are stored on a memory card, insert the card into the camera (📖 15).




Windows users may require the Windows CD when starting the software for the first time.



Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Charge the battery before connecting the camera.

- 2** Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.

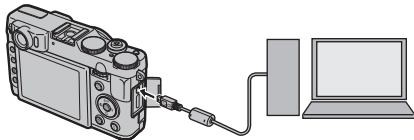

- 3** Turn the camera on and follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

For more information on using the supplied software, start the application and select the appropriate option from the **Help** menu.



- If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure that the computer does not display a message stating that copying is in progress and that the indicator lamp is out before turning the camera off or disconnecting the USB cable (if the number of images copied is very large, the indicator lamp may remain lit after the message has cleared from the computer display). Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using the supplied software in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

Disconnecting the Camera

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.

Uninstalling the Supplied Software

Only uninstall the supplied software when it is no longer required or before beginning reinstallation. After quitting the software and disconnecting the camera, drag “RAW FILE CONVERTER EX powered by SILKYPIX” from “Applications” into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use “Programs and Features” (Windows 8/Windows 7/Windows Vista) or “Add or Remove Programs” (Windows XP) to uninstall MyFinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

Using the Menus: Shooting Mode

Use the shooting menus to adjust shooting settings. The options available vary with the shooting mode selected.

Using the Shooting Menu

- 1 Press **MENU/OK** to display the shooting menu.
- 2 Press the selector up or down to highlight the desired menu item.
- 3 Press the selector right to display options for the highlighted item.
- 4 Press the selector up or down to highlight the desired option.
- 5 Press **MENU/OK** to select the highlighted option.
- 6 Press **DISP/BACK** to exit from the menu.



Shooting Menu Options

Default values are shown in square brackets [].

Adv. MODE [ADVANCED FILTER]

Choose an advanced shooting mode (📖 34).

SCENE POSITION [📖]

Choose a scene for **SP** mode (📖 38).


ISO ISO**[AUTO]**

Control the camera's sensitivity to light.

Option	Description
AUTO	Sensitivity is adjusted automatically in response to shooting conditions.
12800/6400/5000/ 4000/3200/2500/ 2000/1600/1250/ 1000/800/640/500/ 400/320/250/200/100	Sensitivity is set to the specified value, which is shown in the display.

ISO

 Higher values can reduce blur; note, however, that mottling may appear in pictures taken at high sensitivities.

**The Optical Viewfinder (OVF)**

To switch between shutter speed (aperture) and ISO sensitivity displays in the optical viewfinder, rotate the main command dial while pressing the shutter button halfway.

■ AUTO

The following options are available when **AUTO** is selected:

Option	Default
DEFAULT SENSITIVITY	100
MAX. SENSITIVITY	800
MIN. SHUTTER SPEED	1/30

The camera automatically chooses a sensitivity between the default and maximum values. Sensitivity is only raised above the default value if the shutter speed required for optimal exposure would be slower than the value selected for **MIN. SHUTTER SPEED**.



- If the value selected for **DEFAULT SENSITIVITY** is higher than that selected for **MAX. SENSITIVITY**, **DEFAULT SENSITIVITY** will be set to the value selected for **MAX. SENSITIVITY**.
- The camera may select shutter speeds slower than **MIN. SHUTTER SPEED** if pictures would still be underexposed at the value selected for **MAX. SENSITIVITY**.

IMAGE SIZE**[L] 4:3**

Choose the image size and aspect ratio at which pictures are recorded. Large pictures can be printed at large sizes with no drop in quality, while small pictures require less memory, allowing more pictures to be recorded.

**Size Versus Aspect Ratio****Size**

Option	Prints at sizes up to
L	34 × 25 cm (13.5 × 10 in.)
M	24 × 18 cm (9.5 × 7 in.)
S	17 × 13 cm (7 × 5 in.)

Aspect ratio

4:3: Pictures have the same proportions as the camera display.

3:2: Pictures have the same proportions as a frame of 35 mm film.

16:9: Suited for display on High Definition (HD) devices.

1:1: Pictures are square.

IMAGE QUALITY**[FINE]**

Choose a file format and compression ratio. Select **FINE** or **NORMAL** to record JPEG images, **RAW** to record RAW images, or **FINE+RAW** or **NORMAL+RAW** to record both JPEG and RAW images. **FINE** and **FINE+RAW** use lower JPEG compression ratios for higher-quality JPEG images, while **NORMAL** and **NORMAL+RAW** use higher JPEG compression ratios to increase the number of images that can be stored.

D-Ring DYNAMIC RANGE**[AUTO]**

Control contrast. Higher values are recommended for scenes that include both sunlight and deep shade or for increased contrast with such subjects as sunlight on water, brightly-lit autumn leaves, portraits taken against a blue sky, and white objects or people wearing white; note, however, that mottling may appear in pictures taken at higher values. If **AUTO** is selected, the camera will automatically select values between 100% and 400% in response to shooting conditions.

Option		Description
AUTO	P100 100%	Increase contrast when shooting indoors or under overcast skies.
	P200 200%	↑ ↓
	P400 400%	Reduce loss of detail in highlights and shadows when photographing high-contrast scenes.

FILM SIMULATION**[STD]**

Simulate the effects of different types of film, including sepia and black-and-white.

Option	Description
[STD] (PROVIA/ STANDARD)	Standard color reproduction. Suited to a wide range of subjects, from portraits to landscapes.
[V] (Velvia/VIVID)	A high-contrast palette of saturated colors, suited to nature photographs.
[S] (ASTIA/SOFT)	A soft-toned palette of less saturated colors.
[N^{Hi}] (PRO Neg. Hi)	Offers slightly more contrast than [N^{Std}] (PRO Neg. Std). Recommended for outdoor portrait photography.
[N^{Std}] (PRO Neg. Std)	A soft-toned palette. The range of hues available for skin tones is enhanced, making this a good choice for studio portrait photography.
[B&W] (MONOCHROME)	Take pictures in black and white.
[B&W⁺] (MONOCHROME + Ye FILTER)	Take black-and-white pictures with slightly increased contrast. This setting also slightly tones down the brightness of the sky.

Option**Description****[B&W⁺]** (MONOCHROME +
R FILTER)

Take black-and-white pictures with increased contrast. This setting also tones down the brightness of the sky.

[B&W⁺] (MONOCHROME +
G FILTER)

Soften skin tones in black-and-white portraits.

[SEP] (SEPIA)

Take pictures in sepia.

FILM SIMULATION BKT

Choose film types for film simulation bracketing ( 48).

92

Color COLOR [MID]

Adjust color density.

Sharp SHARPNESS [STD]

Choose whether to sharpen or soften outlines.

HL Tone HIGHLIGHT TONE [STD]

Adjust the appearance of highlights.

SL Tone SHADOW TONE [STD]

Adjust the appearance of shadows.

NR NOISE REDUCTION [STD]

Choose the amount of noise reduction.

🔍 INTELLIGENT DIGITAL ZOOM [OFF]

If **2.0x** is selected, intelligent digital zoom magnifies the image to 2x while processing it for sharp, high-resolution results.



- Intelligent digital zoom may end when another mode is selected.
- Intelligent digital zoom may sometimes produce lower quality images than optical zoom.
- Intelligent digital zoom is not available in continuous mode or during movie recording.

📷 ADVANCED ANTI BLUR [ON]

Select **ON** to enable advanced anti blur in **SR+** mode (📖 33).

👤 FACE DETECTION [OFF]

Choose whether the camera automatically detects and sets focus and exposure for human portrait subjects (📖 58).

[Fn] AF MODE

Choose how the camera selects the focus area when in **AF-S** focus mode (📖 51). Note that regardless of the option selected, the camera will focus on the subject in the center of the monitor when macro mode is on (📖 41).

- **[AREA]** **AREA**: Choose the focus area manually (📖 53).
- **[MULTI]** **MULTI**: When the shutter button is pressed halfway, the camera detects high-contrast subjects near the center of the frame and selects the focus area automatically.
- **[TRACKING]** **TRACKING**: Position the subject in the focus target and press the selector left. The camera will track the subject and adjust focus as it moves through the frame.



Note that in **[TRACKING]** mode, the camera focuses continuously, increasing the drain on the battery, and that the sound of the camera focusing may be audible.

[MF ASSIST] MF ASSIST [FOCUS PEAK HIGHLIGHT]

Choose how focus is displayed in manual focus mode (📖 51).

Option	Description
STANDARD	Focus is displayed normally (focus peaking is not available).
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose from LOW and HIGH .

[Fn] Fn BUTTON

Choose the role played by the **Fn** button (📖 57).

DISP. CUSTOM SETTING

Enable or disable the focus area display in the optical viewfinder and choose the items displayed in the LCD monitor. The LCD monitor can display the following items:


FRAMING GUIDELINE*	ELECTRONIC LEVEL
AF DISTANCE INDICATOR	MF DISTANCE INDICATOR
WHITE BALANCE	APERTURE/S-SPEED/ISO
HISTOGRAM	FRAMES REMAINING
IMAGE SIZE/QUALITY	BATTERY LEVEL
PHOTOMETRY	FLASH
FILM SIMULATION	DYNAMIC RANGE
EXP. COMPENSATION	

* You can also select the grid type (109).

See pages 7–9 for the locations of these items in the displays.

Virtual Horizon

Selecting **ELECTRONIC LEVEL** displays a virtual horizon. The camera is level when the two lines overlap.

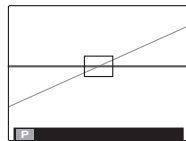

The virtual horizon may not be displayed if the camera lens is pointed up or down.



FLASH**[±0]**

Adjust flash brightness. Choose from values between $+\frac{2}{3}$ EV and $-\frac{2}{3}$ EV. The default setting is ± 0 . Note that the desired results may not be achieved depending on shooting conditions and the distance to the subject.


[] EXTERNAL FLASH [OFF]

Choose **ON** when using an optional flash unit (except Fujifilm products) mounted on the camera hot shoe.



- The flash may not fully light the subject at speeds faster than $\frac{1}{1000}$ s.
- Use auto or custom white balance ( 54).
- If the built-in flash is raised when **ON** is selected for **[] EXTERNAL FLASH**, the built-in flash will fire once to provide a signal for the optional flash unit to fire.
- External flash units can be used in **P, S, A, M**, and **C1/C2** modes.
- Fujifilm external flash units do not require this setting.

 


- The camera can be used with flash units that provide aperture adjustment, external metering, and sensitivity control. Some flash units that are designed specifically for other cameras can not be used.
- For information on Fujifilm external flash units, see Accessories from FUJIFILM ( 117).

[] CUSTOM SET

Save settings for **P, S, A**, and **M** mode ( 31).

[] OVF/LCD SETTING [EYE SENSOR]

Toggle between the optical viewfinder and LCD monitor ( 7).

Option	Description
EYE SENSOR	Automatic display selection using the eye sensor.
LCD	The view through the lens is displayed in the LCD monitor.
OVF	The view through the lens is displayed in the optical viewfinder.

Shooting Menu Options (Movie Mode)

MOVIE MODE [FULL HD]

Choose a frame size for movies (📖 73).

FACE DETECTION [ON]

Choose whether the camera automatically detects and sets focus and exposure for human portrait subjects (📖 58).

SCENE RECOGNITION [ON]

Select **ON** to enable scene recognition during movie recording (📖 58).



Selecting **ON** automatically enables intelligent face detection and sets the focus mode to **AF-C** (📖 51).

FILM SIMULATION [STD]

Simulate the effects of different types of film, including sepia and black-and-white (📖 92).

STILL SHOOTING IN MOVIE [MOVIE PRIORITY]

Choose how the camera records photographs taken during movie recording (📖 72).

Option	Description
MOVIE PRIORITY	The camera takes a photograph without interrupting movie recording. Image size is determined by the option selected for MOVIE MODE .
STILL IMAGE PRIORITY	The camera interrupts filming to take the photograph and resumes filming automatically when recording is complete. Image size is determined by the option selected for IMAGE SIZE .

MIC LEVEL ADJUSTMENT [3]

Adjust the microphone recording level.

Using the Menus: Playback Mode

Using the Playback Menu

1 Press the  button to enter playback mode.



2 Press **MENU/OK** to display the playback menu.



3 Press the selector up or down to highlight the desired menu item.



4 Press the selector right to display options for the highlighted item.



5 Press the selector up or down to highlight the desired option.



6 Press **MENU/OK** to select the highlighted option.



7 Press **DISP/BACK** to exit from the menu.



Playback Menu Options

PHOTOBOOK ASSIST


Create books from your favorite photos ( 68).

IMAGE SEARCH

Search for pictures ( 67).

ERASE

Delete all or selected pictures ( 65).




MARK FOR UPLOAD TO

Select pictures for upload to YouTube, Facebook or MyFinePix.com using MyFinePix Studio (Windows only).

■ ***Selecting Pictures for Upload***

- 1** Select **YouTube** to choose movies for upload to YouTube, **FACEBOOK** to choose photos and movies for upload to Facebook, or **MyFinePix.com** to choose photos for upload to MyFinePix.com.
- 2** Press the selector left or right to display pictures and press **MENU/OK** to select or deselect. Press **DISP/BACK** to exit when all the desired pictures are selected.




- Only movies can be selected for upload to YouTube.
- Only photos can be selected for upload to MyFinePix.com.
- During playback, selected pictures are indicated by  **YouTube**,  **FACEBOOK** or  **MyFinepix.com** icons.

■ **RESET ALL: Deselecting All Pictures**

Choose **RESET ALL** to deselect all pictures. If the number of pictures affected is very large, a message will be displayed while the operation is in progress. Press **DISP/BACK** to exit before the operation is complete.

■ **Uploading Pictures (Windows Only)**

Selected pictures can be uploaded using the **YouTube/Facebook/MyFinePix.com Upload** option in MyFinePix Studio.

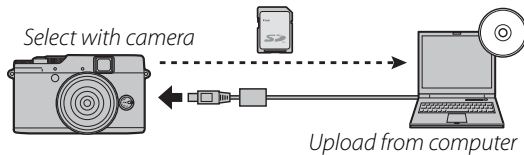

For information on installing MyFinePix Studio and connecting the camera to a computer, see “Viewing Pictures on a Computer” (82).

🖼️ **SLIDE SHOW** **[MULTIPLE]**

View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.

Option	Description
NORMAL	Press selector left or right to go back or skip ahead one frame. Select FADE-IN for fade transitions between frames.
FADE-IN	
NORMAL 🗿	As above, except that camera automatically zooms in on faces selected with Intelligent Face detection.
FADE-IN 🗿	
MULTIPLE	Display several pictures at once.




The camera will not turn off automatically while a slide show is in progress.

RAW RAW CONVERSION

Create JPEG copies of RAW pictures. The original image data are unaffected, allowing a single RAW image to be processed in a multitude of different ways.

1 Select **RAW RAW CONVERSION** in the playback menu.

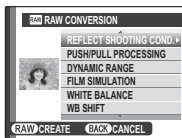


2 Press the selector up or down to highlight a setting and press the selector right to select. Press the selector up or down to highlight the desired option and press **MENU/OK** to select and return to the settings list. Repeat this step to adjust additional settings.


3 Press the **Q** button to preview the JPEG copy. Press **MENU/OK** to save the copy or press **DISP/BACK** to return to Step 2.



Setting	Description
REFLECT SHOOTING COND.	Create a JPEG copy using the settings in effect at the time the photo was taken.
PUSH/PULL PROCESSING	Adjust exposure by -1 EV to $+1$ EV in increments of $\frac{1}{3}$ EV (📖 49).
DYNAMIC RANGE	Enhance details in highlights for natural contrast (📖 91).
FILM SIMULATION	Simulate the effects of different types of film (📖 92).
WHITE BALANCE	Adjust white balance (📖 54).
WB SHIFT	Fine-tune white balance (📖 54).
COLOR	Adjust color density (📖 93).
SHARPNESS	Sharpen or soften outlines (📖 93).
HIGHLIGHT TONE	Adjust highlights (📖 93).
SHADOW TONE	Adjust shadows (📖 93).
NOISE REDUCTION	Process the copy to reduce mottling (📖 93).



RED EYE REMOVAL

If the current picture is marked with a  icon to indicate that it was taken with Intelligent Face Detection, this option can be used to remove red-eye. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select  **RED EYE REMOVAL** in the playback menu.


- 3 Press **MENU/OK**.




- Red-eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red-eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with  **RED EYE REMOVAL** are indicated by a  icon during playback.

PROTECT

Protect pictures from accidental deletion.




- 1 Select  **PROTECT** in the playback menu.
- 2 Highlight one of the following options and press **MENU/OK**:
 - **FRAME**: Protect selected pictures. Press the selector left or right to view pictures and press **MENU/OK** to select or deselect. Press **DISP/BACK** when the operation is complete.
 - **SET ALL**: Protect all pictures.
 - **RESET ALL**: Remove protection from all pictures.



Protected pictures will be deleted when the memory card or internal memory is formatted ( 115).

 CROP




Create a cropped copy of the current picture.

- 1** Display the desired picture.
- 2** Select ** CROP** in the playback menu.
- 3** Use the  and  buttons to zoom the image in and out and use the selector to scroll the picture until the desired portion is displayed.
- 4** Press **MENU/OK** to display a confirmation dialog.
- 5** Press **MENU/OK** again to save the cropped copy to a separate file.




Larger crops produce larger copies; all copies have an aspect ratio of 4:3. If the size of the final copy will be **640**, **OK** will be displayed in yellow.

 Intelligent Face Detection

If the picture was shot with Intelligent Face Detection ( 58),  will be displayed in the monitor. Press the  button to zoom in on the selected face.

 RESIZE

Create a small copy of the current picture.


- 1** Display the desired picture.
- 2** Select ** RESIZE** in the playback menu.
- 3** Highlight a size and press **MENU/OK** to display a confirmation dialog.
- 4** Press **MENU/OK** to save the resized copy to a separate file.



The sizes available vary with the size of the original image.

IMAGE ROTATE

Rotate pictures taken in tall orientation so that they are displayed in tall orientation in the LCD monitor.






- 1 Display the desired picture.
- 2 Select  **IMAGE ROTATE** in the playback menu.
- 3 Press the selector down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 4 Press **MENU/OK**. The picture automatically be displayed in the selected orientation whenever it is played back on the camera.



- Protected pictures can not be rotated. Remove protection before rotating pictures (📖 102).
- The camera may not be able to rotate pictures created with other devices.

COPY

Copy pictures from internal memory to a memory card.

- 1 Select  **COPY** in the playback menu.
- 2 Highlight one of the following options and press the selector right:
 -  **INTERNAL MEMORY** →  **SD CARD**: Copy pictures from internal memory to a memory card.
 -  **SD CARD** →  **INTERNAL MEMORY**: Copy pictures from a memory card to internal memory.
- 3 Highlight one of the following options and press **MENU/OK**:
 - **FRAME**: Copy selected pictures. Press the selector left or right to view pictures and press **MENU/OK** to copy the current picture.
 - **ALL FRAMES**: Copy all pictures.




- Copying ends when the destination is full.
- DPOF print information is not copied (📖 79).

PRINT ORDER (DPOF)

Select pictures for printing on DPOF- and Pict-Bridge-compatible devices (📖 77).

DISP. ASPECT**[4:3]**

Choose how High Definition (HD) devices display pictures with an aspect ratio of 4 : 3 (this option is available only when an HDMI cable is connected). Select **16:9** to display the image so that it fills the screen with its top and bottom cropped out, **4:3** to display the entire image with black bands at either side.

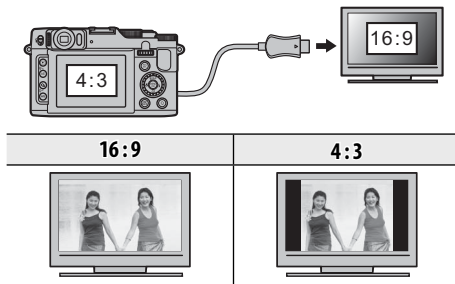

Photographs with an aspect ratio of 16 : 9 are displayed full screen, those with an aspect ratio of 3 : 2/1 : 1 in a black frame.

The Setup Menu

Using the Setup Menu

1 Display the setup menu.


1.1 Press **MENU/OK** to display the menu for the current mode.



1.2 Press the selector left to highlight a left tab.



1.3 Press the selector up or down to select  **SET**.
The setup menu appears.

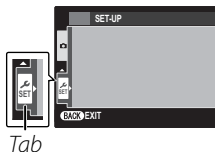

2 Adjust settings.

2.1 Press the selector right to activate the setup menu.



2.2 Press the selector up or down to highlight a menu item.



2.3 Press the selector right to display options for the highlighted item.



2.4 Press the selector up or down to highlight an option.



2.5 Press **MENU/OK** to select the highlighted option.



2.6 Press **DISP/BACK** to exit from the menu.



Setup Menu Options

 
Default values are shown in square brackets [].

DATE/TIME





Set the camera clock (📖 21).

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between local time and your home time zone:

- 1 Highlight  LOCAL and press the selector right.
- 2 Use the selector to choose the time difference between local time and your home time zone.
- 3 Press MENU/OK.

To switch between local time and your home time zone, highlight  LOCAL or  HOME and press MENU/OK.

Option	Description
 HOME	Switch to the time currently selected for  DATE/TIME (see above).
 LOCAL	Switch to local time. If this option is selected,  and the time and date will be displayed in yellow for three seconds each time the camera is turned on.

言語/LANG.

Choose a language (📖 21).

RESET

Reset shooting or setup menu options to default values.  DATE/TIME,  TIME DIFFERENCE, and  BACKGROUND COLOR are not affected.

- 1 Highlight the desired option and press the selector right.
- 2 A confirmation dialog will be displayed; highlight OK and press MENU/OK.

[M/AF] SILENT MODE [OFF]

Select **ON** to disable the speaker, flash, and AF-assist illuminator in situations in which camera sounds or lights may be unwelcome.

[C] FOCUS CONTROL DIAL [C CW]

Choose the direction in which the sub-command dial is rotated to increase the focus distance.

[MF] FOCUS CHECK [ON]

If **ON** is selected for **[MF] FOCUS CHECK**, the image will be magnified in the display to assist focus when the sub-command dial is rotated in manual focus mode (📖 51, 52). The camera must be in manual focus mode.

[S] SOUND SET-UP

Adjust sound settings.

■ OPERATION VOL. [🔊 1]

Adjust the volume of the sounds produced when camera controls are operated. Choose **OFF** (mute) to disable control sounds.

■ SHUTTER VOLUME [🔊 1]

Adjust the volume of the sounds produced when the shutter is released. Choose **OFF** (mute) to disable the shutter sound.

■ SHUTTER SOUND [🎵 1]

Choose the sound made by the shutter.

■ PLAYBACK VOLUME [7]

Adjust the volume for movie playback.

SCREEN SET-UP

Adjust display settings.

IMAGE DISP. [0.5 SEC]

Choose how long pictures are displayed in the LCD monitor after shooting.

Option	Description
1.5 SEC	Pictures are displayed for 1.5 seconds (1.5 SEC) or 0.5 seconds (0.5 SEC). Colors may differ slightly from those in the final image.
0.5 SEC	
ZOOM (CONTINUOUS)	Pictures are displayed until the MENU/OK button is pressed.
OFF	Pictures are not displayed after shooting.



OFF has no effect in continuous shooting mode.

LCD BRIGHTNESS [0]

Control the brightness of the display.

MONITOR SUNLIGHT MODE [OFF]

Select ON to make the display in the monitor easier to read in bright light.


FRAMING GUIDELINE

GRID 9

Choose the type of framing grid available in shooting mode.


GRID 9

For “rule of thirds” composition.

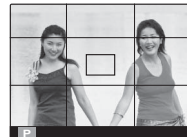


GRID 24

A six-by-four grid.

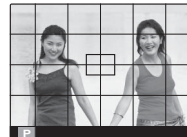

HD FRAMING

Frame HD pictures in the crop shown by the lines at the top and bottom of the display.

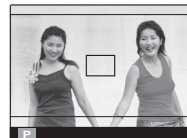

■ AUTOROTATE PB

Choose **ON** to automatically rotate “tall” (portrait-orientation) pictures during playback.

[ON]**■ BACKGROUND COLOR**

Choose a color scheme.

[WHITE]**⚡ POWER MANAGEMENT**

Adjust power management settings.

■ AUTO POWER OFF**[2 MIN]**

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that in some situations the camera turns off automatically even when **OFF** is selected.

■ QUICK START MODE**[OFF]**

Allow the camera to restart in a fast manner after turned off (**ON/OFF**).



If **ON** is selected, the camera will continue to draw a small amount of current from the battery even when off. Quick start mode is cancelled automatically if no operations are performed for about 20 minutes.

■ POWER MANAGEMENT



Optimize camera performance for increased battery life or display quality.

Option	Description
POWER SAVE	Reduces display refresh rate. The display dims to save power if no operations are performed for a short period, but can be restored by operating camera controls. Select this option to save power.
HIGH PERFORMANCE	Choose for a brighter display and faster focus.



POWER SAVE does not take effect when Intelligent Face Detection is on.

■ DUAL IS MODE



Choose from the following image stabilization options:

Option	Description
CONTINUOUS + MOTION	Image stabilization on. If + MOTION is selected, the camera will adjust shutter speed to reduce motion blur when a moving objects are detected.
CONTINUOUS	
SHOOTING + MOTION	As above, except that image stabilization is performed only when the shutter button is pressed halfway or the shutter is released.
SHOOTING ONLY	
OFF	Image stabilization off. Choose this option when using a tripod.



+ MOTION has no effect when sensitivity is set to a fixed value, and may also be unavailable at some other combinations of settings. The effect may vary with lighting conditions and the speed at which the object is moving.

 RED EYE REMOVAL [ON]

Choose **ON** to remove red-eye effects caused by the flash when shooting with Intelligent Face Detection.



- Red-eye reduction is performed only when a face is detected.
- Red-eye removal is not available with RAW images.


 AF ILLUMINATOR [ON]

If **ON** is selected, the AF-assist illuminator will light to assist autofocus.



- The camera may be unable to focus using the AF-assist illuminator in some cases. If the camera is unable to focus in macro mode, try increasing the distance to the subject.
- Avoid shining the AF-assist illuminator directly into your subject's eyes.

 AE/AF-LOCK MODE [P]

If **AE&AF ON WHEN PRESSING** is selected, exposure and/or focus will lock while the **AEL/AFL** button is pressed. If **AE&AF ON/OFF SWITCH** is selected, exposure and/or focus will lock while the **AEL/AFL** button is pressed and remain locked until the button is pressed again ( 40).

 AE/AF-LOCK BUTTON [AE-L]


Choose whether the **AEL/AFL** button locks only exposure, only focus, or both exposure and focus (**AE-L / AF-L / AE+AF**).

SAVE DATA SET-UP

Adjust file-management settings.

FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.

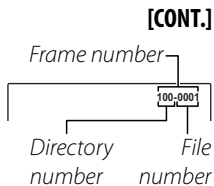

Option	Description
CONTINUOUS	Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
RENEW	Numbering is reset to 0001 after formatting or when a new memory card is inserted.



- If the frame number reaches 999-9999, the shutter release will be disabled (📖 130).
- Selecting **RESET** (📖 107) sets **FRAME NO.** to **CONTINUOUS** but does not reset the file number.
- Frame numbers for pictures taken with other cameras may differ.

 

SAVE ORG IMAGE

[OFF]

Choose **ON** to save unprocessed copies of seamless 📖 panoramas or pictures taken using **RED EYE REMOVAL**, **PRO LOW-LIGHT MODE**, or **PRO FOCUS MODE**.

DATE STAMP [OFF]

Stamp the time and/or date of recording on photographs as they are taken.

Option	Description
	Stamp new photographs with the date and time of recording.
	Stamp new photographs with the date of recording.
OFF	Do not stamp the time and date on new photographs.



- Time and date stamps can not be deleted. Turn **DATE STAMP** off to prevent time and date stamps appearing on new photographs.
- If the camera clock is not set, you will be prompted to set the clock to the current date and time (📖 21, 107).
- We recommend that you turn the DPOF “print date” option off when printing images with a time and date stamp (📖 79).
- Time and date stamps do not appear on movies, panoramas, or pictures taken with best frame capture.

FOCUS SCALE UNITS [METERS]

Choose the units used for the focus distance indicator (📖 51).

CUSTOM RESET

Reset all settings for mode **C1/C2**. A confirmation dialog will be displayed, press the selector up or down to highlight **OK** and press **MENU/OK**.

Eye-Fi TRANSFER**[ON]**





The camera can be used with third-party Eye-Fi cards; for more information see the manual provided with the card or contact the manufacturer.

Option	Description
ON	Pictures taken with the camera are uploaded to a pre-selected destination.
OFF	Pictures are not uploaded automatically.



Observe local regulations regarding the use of wireless devices when using Eye-Fi cards. Select **OFF** in aircraft, hospitals, and other locations where the use of wireless devices is prohibited.


The Eye-Fi Icon

Icon	Status
	Standby/no connection
 (blinks)	Connecting
 (animated)	Upload in progress
 (red)	Error

FORMAT


If a memory card is inserted in the camera, this option will format the memory card. If no memory card is inserted, this option will format internal memory.



- All data—including protected pictures—will be deleted from the memory card or internal memory. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery-chamber cover during formatting.


 

 
 
 
Optional Accessories



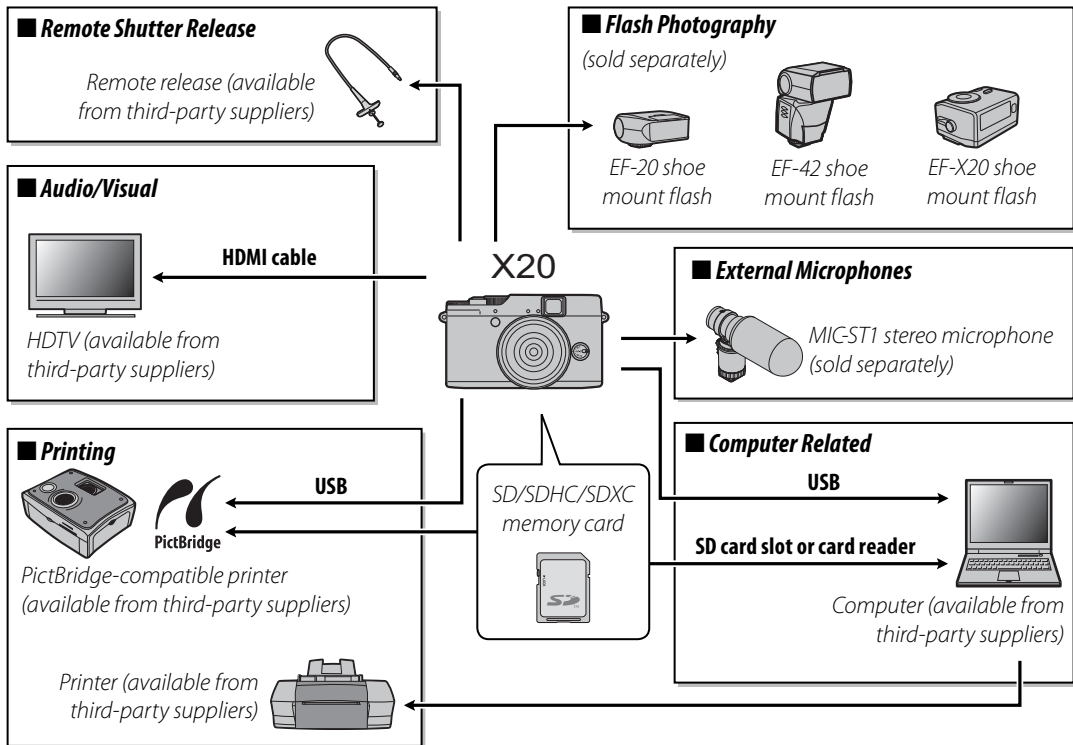


The camera supports a wide range of accessories from FUJIFILM and other manufacturers.



Accessories from FUJIFILM

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.


Rechargeable Li-ion batteries	NP-50: Additional large-capacity NP-50 rechargeable batteries can be purchased as required.	
Battery chargers	BC-45W: Replacement battery chargers can be purchased as required. The BC-45W charges an NP-50 battery in about 150 minutes at +20°C (+68°F).	
AC power adapters	AC-5VX (requires CP-50 DC coupler): Use for extended playback or when copying pictures to a computer (shape of adapter and plug vary with region of sale).	
DC couplers	CP-50: Connect the AC-5VX to the camera.	
Shoe Mount Flash units	EF-20: Hot-shoe clip-on flash, guide number: 20 (ISO 100), compatible with i-TTL, bounce capability: up to 90°, power source: 2 AA-size 1.5V batteries	
	EF-42: Hot-shoe clip-on flash, guide number: up to 42 (ISO 100), auto zoom: 24-105mm (equivalent to 135 format), compatible with i-TTL, bounce capability: up to 90°, power source: 4 AA-size 1.5V batteries Set "Format setting" to "35 mm" when using EF-42 and X10.	

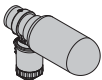 Shoe Mount Flash units	EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.).	
Leather cases	LC-X20: This leather case, exclusively for use with the X20/X10, combines practicality with the luxury of leather and comes with a shoulder strap made of the same material. Pictures can be taken with the camera still in its case.	
Protector filters with hoods	LHF-X20: This protective filter, exclusively for use with the X20/X10, comes with its own hood and hood cap.	
Lens hoods	LH-X10: This aluminum lens hood, exclusively for use with the X20/X10, comes with an adapter ring made of the same material. The adapter ring is also used when attaching the $\phi 52$ mm filters available from third-party suppliers.	
Stereo microphones	MIC-ST1: An external microphone for movie recording.	


Using Optional Accessories

■ Attaching LHF-X20 Protector Filters

- 1 Attach the filter.
Rotate the filter as shown to attach it to the camera.

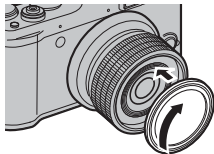


- 2 Attach the filter hood.
A hood is supplied with the filter. Attach it to the filter as shown.

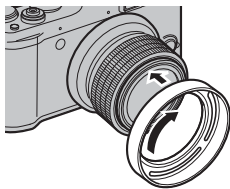


- Third-party filters can not be used.
- Attach the hood cap when the camera is not in use.

■ Attaching LH-X10 Lens Hoods

- 1 Connect the lens hood and the adapter ring as shown.

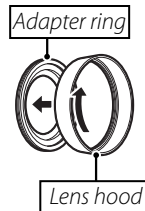


- 2 Attach the lens hood to the camera with the connected adapter ring.
Rotate the lens hood as shown.

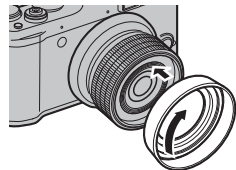


- Keep the lens cap in a safe place when not in use.

■ Attaching PRF-52 and Third-Party Filters

 - 1 Remove the adapter ring from the lens hood as shown.

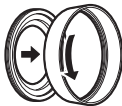

- 2 Attach the adapter ring to the camera. Rotate the adapter ring as shown.

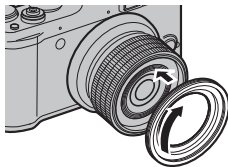


- 3 Attach the filter to the adapter ring. For details, please refer to the manual supplied with the filter.



- Third-party filters must be 52 mm in diameter.
- Keep the lens cap in a safe place when not in use.
- Do not attach 52 mm filters directly to the camera. Use an adapter ring.
- The lens hood can be attached after the filter is attached.

■ Third-Party Remote Releases

Third-party remote releases (available from third-party suppliers) can be connected as shown below.

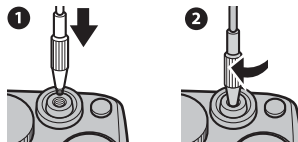

Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

Cleaning

Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

Traveling

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

Problems and Solutions

Power and Battery

Problem	Solution
The camera does not turn on.	<ul style="list-style-type: none">• The zoom ring (ON/OFF switch) is not correctly rotated: Rotate the zoom ring to OFF and then rotate the zoom ring again to the point between 28 and 112 (📖 19).• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 13).• The battery is inserted incorrectly: Reinsert in the correct orientation (📖 15).• The battery-chamber cover is not latched: Latch the battery-chamber cover (📖 15).• The AC power adapter and DC coupler are connected incorrectly: Reconnect the AC power adapter and DC coupler.
The battery runs down quickly.	<ul style="list-style-type: none">• The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture.• There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth.• 🔋 HIGH PERFORMANCE is selected for POWER MANAGEMENT: Select 🔋 POWER SAVE to reduce the drain on the battery (📖 111).• 📷* is selected for shooting mode: Select 📷 mode to reduce the drain on the battery (📖 27).• 🔍 TRACKING is selected for 📷 AF MODE: Select a different AF mode (📖 94).• AF-C is selected for focus mode: Select a different focus mode (📖 51).• The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery.
The camera turns off suddenly.	<ul style="list-style-type: none">• The zoom ring (ON/OFF switch) is not correctly rotated: Rotate the zoom ring to OFF and then rotate the zoom ring again to the point between 28 and 112 (📖 19).• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 13).• The AC power adapter or DC coupler has been disconnected: Reconnect the AC power adapter and DC coupler.

Problem	Solution
Charging does not start.	Reinsert the battery in the correct orientation and make sure that the charger is plugged in (📖 13).
Charging is slow.	Charge the battery at room temperature (📖 vi).
The charging lamp lights, but the battery does not charge.	<ul style="list-style-type: none"> • There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth. • The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM dealer. • The battery is too hot or too cold: Wait for the battery temperature to stabilize (📖 13).

Menus and Displays

Problem	Solution
Menus and displays are not in English.	Select ENGLISH for 🗣️ 言語/LANG. (📖 21, 107).

Shooting

Problem	Solution
No picture is taken when the shutter button is pressed.	<ul style="list-style-type: none"> • Memory is full: Insert a new memory card or delete pictures (📖 16, 65). • Memory is not formatted: Format the memory card or internal memory (📖 115). • There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth. • The memory card is damaged: Insert a new memory card (📖 16). • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 13). • The camera has turned off automatically: Turn the camera on (📖 19). • The indicator lamp was orange when you attempted to record a panorama: Wait until the indicator lamps turns off (📖 25).
The LCD monitor goes dark after shooting.	The LCD monitor may darken while the flash charges. Wait for the flash to charge (📖 42).

Problem	Solution
The camera does not focus.	<ul style="list-style-type: none"> • The subject is close to the camera: Select macro mode (📖 41). • The subject is far away from the camera: Cancel macro mode (📖 41). • The subject is not suited to autofocus: Use focus lock (📖 39).
Macro mode is not available.	Choose a different shooting mode (📖 27).
Intelligent Face Detection is not available.	Intelligent Face Detection is not available in the current shooting mode: Choose a different shooting mode (📖 27).
No face is detected.	<ul style="list-style-type: none"> • The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions. • The subject's face occupies only a small area of the frame: Change the composition so that the subject's face occupies a larger area of the frame (📖 39). • The subject's head is tilted or horizontal: Ask the subject to hold their head straight. • The camera is tilted: Keep the camera level (📖 23). • The subject's face is poorly lit: Shoot in bright light.
Wrong subject is selected.	The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (📖 39).
The flash does not fire.	<ul style="list-style-type: none"> • The flash is not available in the current shooting mode: Choose a different shooting mode (📖 27). • The camera is in super macro or continuous shooting mode: Turn super macro and continuous shooting modes off (📖 41). • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (📖 13). • The camera is in silent mode: Turn silent mode off (📖 108). • The flash is not raised: Raise the flash (📖 42).
Some flash modes are not available.	<ul style="list-style-type: none"> • The desired flash mode is not available in the current shooting mode: Choose a different shooting mode (📖 27). • The camera is in silent mode: Turn silent mode off (📖 108).

Problem	Solution
The flash does not fully light the subject.	<ul style="list-style-type: none"> • The subject is not in range of the flash: Position the subject in range of the flash (📖 135). • The flash window is obstructed: Hold the camera correctly (📖 23). • Fast shutter speed selected: Choose a slower shutter speed (📖 29, 30).
Pictures are blurred.	<ul style="list-style-type: none"> • The lens is dirty: Clean the lens (📖 121). • The lens is blocked: Keep objects away from the lens (📖 23). • !AF is displayed during shooting and the focus frame is displayed in red: Check focus before shooting (📖 128). • !C is displayed during shooting: Use the flash or a tripod (📖 42).
Pictures are mottled.	<ul style="list-style-type: none"> • A slow shutter speed is selected at high temperatures: This is normal and does not indicated a mal-function. • The camera has been used continuously at high temperatures or a temperature warning is displayed: Turn the camera off and wait for it to cool down.
Pictures are not recorded.	Power was interrupted during shooting. Before connecting the AC power adapter or DC coupler, turn the camera off. Leaving the camera on can result in corrupted files or damage to the memory card or internal memory.
The viewfinder display is not clear.	Dioptr adjustment is not adjusted correctly: Slide the diopter adjustment control up and down until the viewfinder display is in sharp focus (📖 4).
Sounds made by the camera are recorded with movies.	<ul style="list-style-type: none"> • The focus mode selector is set to AF-C. Select a different focus mode (📖 51, 72). • Intelligent Face Detection is on: Turn Intelligent Face Detection off (📖 58).

Playback






Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom unavailable.	The picture has been saved at 640 , or is from another make or model of camera (📖 63).
No sound in movie playback.	<ul style="list-style-type: none"> • The camera is in silent mode: Turn silent mode off (📖 108). • Playback volume is too low: Adjust playback volume (📖 108). • The microphone was obstructed: Hold the camera correctly during recording (📖 2). • The speaker is obstructed: Hold the camera correctly during playback (📖 2).
Selected pictures are not deleted.	Some of the pictures selected for deletion are protected. Remove protection using the device with which it was originally applied (📖 102).
File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (📖 19).



 
Connections/Miscellaneous

Problem	Solution
No picture or sound.	<ul style="list-style-type: none"> • The camera is not properly connected: Connect the camera properly (📖 75). • Input on the television is set to “TV”: Set input to “HDMI”. • The volume on the TV is too low: Adjust the volume.
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (📖 86).
Can not transfer RAW or JPEG files to computer.	Use the bundled software to transfer pictures (📖 82).
Pictures can not be printed.	<ul style="list-style-type: none"> • The camera is not properly connected: Connect the camera correctly (📖 76). • The printer is off: Turn the printer on.
Only one copy is printed/ the date is not printed.	The printer is not PictBridge compatible.
The camera is unresponsive.	<ul style="list-style-type: none"> • Temporary camera malfunction: Remove and reinsert the battery (📖 15) or disconnect and reconnect the AC power adapter/DC coupler. • The battery is exhausted: Charge the battery (📖 13) or insert a fully-charged spare battery (📖 15).
The camera does not function as expected.	Remove and reinsert the battery (📖 15) or disconnect and reconnect the AC power adapter/DC coupler. If the problem persists, contact your FUJIFILM dealer.
I want to use an AC power adapter and DC coupler overseas.	Check the label on the AC power adapter. The AC power adapter can be used with voltages of 100–240V. Consult your travel agent for information on plug adapters.
No sound.	Turn silent mode off (📖 108).


Warning Messages and Displays

The following warnings are displayed in the LCD monitor:

Warning	Description
 (red)	Low battery. Charge the battery (📖 13) or insert a fully-charged spare battery (📖 15).
 (blinks red)	Battery exhausted. Charge the battery (📖 13) or insert a fully-charged spare battery (📖 15).
	Slow shutter speed. Pictures may be blurred; use the flash or a tripod.
!AF (displayed in red with red focus frame)	The camera can not focus. Try one of the following solutions: <ul style="list-style-type: none">• Use focus lock to focus on another subject at the same distance, then recompose the picture (📖 39).• Use macro mode to focus when taking close-ups (📖 41).
	The subject is too close to the camera to be framed accurately in the optical viewfinder. Use the LCD monitor.
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. If the subject is dark, use the flash (📖 42).
FOCUS ERROR	
TURN OFF THE CAMERA AND TURN ON AGAIN	Camera malfunction. Turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer.
LENS CONTROL ERROR	
CARD NOT INITIALIZED	<ul style="list-style-type: none">• The memory card or internal memory is not formatted or the memory card was formatted in a computer or other device: Format the memory card or internal memory using the  FORMAT option in the camera setup menu (📖 115).• The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card (📖 115). If the message persists, replace the card.• Camera malfunction: Contact a FUJIFILM dealer.
PROTECTED CARD	The memory card is locked. Unlock the card (📖 16).

Warning	Description
BUSY	The memory card is incorrectly formatted. Use the camera to format the card (📖 115).
	Turn the camera off and wait for it to cool. If no action is taken, the camera will turn off automatically.
CARD ERROR	The memory card is not formatted for use in the camera. Format the card (📖 115).
	The memory card contacts require cleaning or the memory card is damaged. Clean the contacts with a soft, dry cloth. If the message is repeated, format the card (📖 115). If the message persists, replace the card.
	Incompatible memory card. Use a compatible card (📖 18).
	Camera malfunction. Contact a FUJIFILM dealer.
 MEMORY FULL	The memory card or internal memory is full and pictures can not be recorded or copied. Delete pictures or insert a memory card with more free space.
 MEMORY FULL	
INTERNAL MEMORY IS FULL INSERT A NEW CARD	
WRITE ERROR	<ul style="list-style-type: none"> • Memory card error or connection error: Reinsert the card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer. • Not enough memory remaining to record additional pictures: Delete pictures or insert a memory card with more free space. • The memory card or internal memory is not formatted: Format the memory card or internal memory (📖 115).
READ ERROR	<ul style="list-style-type: none"> • The file is corrupt or was not created with the camera: The file can not be viewed. • The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card (📖 115). If the message persists, replace the card. • Camera malfunction: Contact a FUJIFILM dealer.

Warning	Description
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Format the memory card and select RENEW for FRAME NO. . Take a picture to reset frame numbering to 100-0001, then select CONTINUOUS for FRAME NO. (📖 111).
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode. Exit silent mode before choosing a flash mode or adjusting the volume (📖 25).
TOO MANY FRAMES	<ul style="list-style-type: none"> • A search has returned more than 30,000 results: Choose a search that returns fewer results. • More than 999 images are selected for deletion: Choose fewer images.
PROTECTED FRAME	An attempt was made to delete or rotate to a protected picture. Remove protection and try again (📖 102).
📷 CAN NOT CROP	📷 pictures can not be cropped.
CAN NOT CROP	The picture is damaged or was not created with the camera.
📷 CANNOT EXECUTE	An attempt was made to create a resized copy at a size equal to or larger than the original. Choose a smaller size.
📷 CANNOT EXECUTE	
📷 CANNOT EXECUTE	
CAN NOT ROTATE	An attempt was made to rotate a picture that can not be rotated.
🎬 CAN NOT ROTATE	Movies can not be rotated.
📷 CANNOT EXECUTE	Red-eye removal can not be applied to the selected picture.
🎬 CANNOT EXECUTE	Red-eye removal can not be applied to movies.
NO CARD	No memory card inserted when COPY is selected. Insert a memory card.
📷 NO IMAGE	The source selected for COPY contains no images. Select a different source.
📷 NO IMAGE	

Warning	Description
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images. Copy the pictures to internal memory and create a new print order.
CAN NOT SET DPOF	The picture can not be printed using DPOF.
 CAN NOT SET DPOF	Movies can not be printed using DPOF.
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device. Confirm that the device is turned on and that the USB cable is connected.
PRINTER ERROR	Printer out of paper or ink, or other printer error. Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?	Printer out of paper or ink, or other printer error. Check printer (see printer manual for details). If printing does not resume automatically, press MENU/OK to resume.
CANNOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer. Movies and some pictures created with other devices can not be printed; if the picture is a still picture created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate. A limited number of test pictures can be taken when no memory card is inserted.

■ Photographs

		L				M				S				RAW
		4:3	3:2	16:9	1:1	4:3	3:2	16:9	1:1	4:3	3:2	16:9	1:1	
4 GB	FINE	800	900	1060	1060	1280	1450	1690	1690	2360	2620	3440	3090	200
	NORMAL	1260	1410	1670	1670	2460	2800	3250	3250	4460	5020	6340	5740	
8 GB	FINE	1590	1800	2120	2120	2540	2880	3370	3370	4700	5210	6840	6140	410
	NORMAL	2520	2810	3320	3320	4890	5570	6470	6470	8870	9980	12610	11410	

■ Movie

	HD 1920 × 1080 (60 fps) ¹	HD 1280 × 720 (60 fps) ²	640 640 × 480 (30 fps) ³	HS 640 × 480 (80 fps) ⁴	HS 320 × 240 (150 fps) ⁴	HS 320 × 112 (250 fps) ⁴
4 GB	13 min.	25 min.	112 min.	83 min.	167 min.	83 min.
8 GB	26 min.	51 min.	223 min.	166 min.	332 min.	166 min.





1 Use a CLASS10 card or better. Individual movies can not exceed 14 minutes in length.





































2 Use a CLASS10 card or better. Individual movies can not exceed 27 minutes in length.

3 Individual movies can not exceed 115 minutes in length.

4 Use a CLASS10 card or better. Individual movies can not exceed 30 seconds in length.

Specifications

System	
Model	Digital Camera X20
Effective pixels	12 million
Image sensor	2/3-in., X-Trans CMOS II sensor with primary color filter
Storage media	• Internal memory (approx. 24 MB) • SD/SDHC/SDXC memory cards
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)
File format	• Still pictures: Exif 2.3 JPEG (compressed); RAW (original RAF format, special-purpose software required); RAW+JPEG available • Movies: H.264 standard with linear PCM stereo sound (M0V)
Image size (pixels)	• L 4:3: 4,000×3,000 • L 3:2: 4,000×2,664 • L 16:9: 4,000×2,248 • L 1:1: 2,992×2,992 • M 4:3: 2,816×2,112 • M 3:2: 2,816×1,864 • M 16:9: 2,816×1,584 • M 1:1: 2,112×2,112 • S 4:3: 2,048×1,536 • S 3:2: 2,048×1,360 • S 16:9: 1,920×1,080 • S 1:1: 1,536×1,536 •  MOTION PANORAMA 3:2: 1,624×11,520 (tall)/11,520×1,080 (wide) •  MOTION PANORAMA 16:9: 1,624×5,760 (tall)/5,760×1,080 (wide) •  MOTION PANORAMA 1:1: 1,624×3,840 (tall)/3,840×1,080 (wide) •  MOTION PANORAMA 3:2: 1,624×11,520 (tall)/11,520×1,080 (wide)
Digital zoom	About 2.0× with intelligent digital zoom (up to 8× when combined with optical zoom)
Lens	Fujinon 4× optical zoom lens, F2.0 (wide angle)–F2.8 (telephoto)
Focal length	f=7.1 mm–28.4 mm (35-mm format equivalent: 28 mm–112 mm)
Aperture	F2.0–F11 (wide angle)/F2.8–F11 (telephoto) in increments of 1/3 EV
Focus range (distance from front of lens)	• Approx. 50 cm (1.6 ft.)–infinity (wide angle); 80 cm (2.6 ft.)–infinity (telephoto) • Macro: approx. 10 cm–3 m/0.3 ft.–9.8 ft. (wide angle); 50 cm–3 m/1.6 ft.–9.8 ft. (telephoto) • Super macro: approx. 1 cm–1 m/0.3 in.–3.2 ft. (wide angle)

System	
Sensitivity	Standard output sensitivity equivalent to ISO 100, 200, 250, 320, 400, 500, 640, 800, 1000, 1250, 1600, 2000, 2500, 3200, 4000, 5000, 6400, 12800; AUTO
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE
Exposure control	Programmed AE (with program shift), shutter-priority AE, aperture-priority AE, and manual exposure
Exposure compensation	-2 EV - +2 EV in increments of $\frac{1}{3}$ EV
Scene modes	 (PORTRAIT),  (PORTRAIT ENHANCER),  (LANDSCAPE),  (SPORT),  (NIGHT),  (NIGHT (TRIPOD)),  (FIREWORKS),  (SUNSET),  (SNOW),  (BEACH),  (UNDERWATER),  (PARTY),  (FLOWER),  (TEXT)
Picture stabilization	Optical stabilization (lens-shift type)
Shutter speed (combined mechanical and electronic shutter)	<ul style="list-style-type: none"> • : $\frac{1}{4}$ s - $\frac{1}{1,000}$ s • : $\frac{3}{5}$ s - $\frac{1}{1,000}$ s • : 4 s - $\frac{1}{2}$ s • P, AUTO, Adv., SP (except , , and ): $\frac{1}{4}$ s - $\frac{1}{4,000}$ s • Other modes: 30 s - $\frac{1}{4,000}$ s
Continuous	<ul style="list-style-type: none"> • : frame rate can be selected from 12, 9.0, 6.0, and 3.0 fps (JPEG); maximum number of frames is respectively 11, 13, 20, and 39 • : max. 8 frames; frame rate can be selected from 12, 9.0, 6.0, and 3.0 fps (JPEG) • : 3 frames (selected exposure, overexposure, underexposure) • : 3 frames (selected sensitivity, sensitivity raised, sensitivity lowered) • : 3 frames (, , , , , , , , , ) • : 3 frames (100%, 200%, 400%)
Focus	<ul style="list-style-type: none"> • Mode: Single AF, continuous AF, manual focus • Focus-area selection: Multi, area, tracking • Autofocus system: Intelligent hybrid AF (TTL contrast-detect/phase-detection AF) with AF-assist illuminator

System	
White balance	Automatic scene detection; 8 manual preset modes for direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, incandescent lighting, underwater, color temperature ; custom white balance
Self-timer	Off, 2 sec., 10 sec.
Flash	Manual pop-up flash; effective range when sensitivity is set to 800 is approx. 30 cm–7.0 m/0.9 ft.–22.9 ft. (wide angle), 50 cm–5.0 m/1.6 ft.–16.4 ft. (telephoto)
Flash modes	Auto, forced flash, off, slow synchro (red-eye removal off); auto with red-eye removal, forced flash with red-eye removal, off, slow sync with red-eye removal (red-eye removal on)
Optical viewfinder	Optical zoom viewfinder; frame coverage approx. 85%
Monitor	2.8-in. (7.1 cm), 460k-dot color LCD monitor; frame coverage approx. 100%
Movies	<ul style="list-style-type: none"> • Full HD 1920 × 1080 (1080p), 60 fps • HD 1280 × 720 (720p), 60 fps • 640 640 × 480 (VGA), 30 fps • HS 640 × 480, 80 fps • HS 320 × 240, 150 fps • HS 320 × 112, 250 fps <p>Note: Full HD, HD, and 640 movies are recorded with stereo sound.</p>

Input/output terminals**HDMI output** HDMI Mini Connector**Digital input/output** USB 2.0 High-Speed; 8-pin multi-connector (USB); MTP/PTP**Power supply/other**

Power sources

- NP-50 rechargeable battery
- AC-5VX AC power adapter and CP-50 DC coupler (sold separately)

Battery life (approximate number of frames that can be taken with a fully-charged battery)

Battery type	Approximate number of frames
NP-50 (type supplied with camera)	270

CIPA standard, measured in  (auto) mode using battery supplied with camera and SD memory card.

Note: Number of shots that can be taken with battery varies with battery charge level and will decline at low temperatures.

Camera dimensions 117.0 mm × 69.6 mm × 56.8 mm/4.6 in. × 2.7 in. × 2.2 in. (W × H × D)**Shooting weight** Approx. 353 g/12.4 oz., including battery and memory card**Camera weight** Approx. 333 g/11.7 oz., excluding battery, accessories, and memory cards**Operating conditions** • **Temperature:** 0°C – +40°C/+32°F – +104°F • **Humidity:** 10% – 80% (no condensation)

NP-50 rechargeable battery

Nominal voltage	DC 3.6V
Nominal capacity	1000 mAh
Operating temperature	0°C – +40°C/+32°F – +104°F
Dimensions (W×H×D)	35.4 mm×40.0 mm×6.6 mm/1.3 in.×1.5 in.×0.2 in.
Weight	Approx. 18 g/0.6 oz.

BC-50B battery charger

Rated input	100V–240V AC, 50/60 Hz	
Input capacity	• 100 V: 8.0 VA	• 240 V: 12 VA
Rated output	4.2V DC, 600 mA	
Supported batteries	NP-50 rechargeable batteries	
Charging time	Approx. 110 minutes (+20°C/+68°F)	
Dimensions (W×H×D)	90 mm×46 mm×28 mm/3.5 in.×1.8 in.×1.1 in., excluding projections	
Weight	Approx. 63 g/2.2 oz., excluding battery	
Operating temperature	0°C – +40°C/+32°F – +104°F	

Weight and dimensions vary with the country or region of sale.

Notices

- Specifications subject to change without notice; for the latest information, visit http://www.fujifilm.com/products/digital_cameras/index.html. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

Restrictions on Camera Settings

Shooting Mode and Camera Settings

The options available in each shooting mode are listed below.

		SR+	📷	📷	📷	📷	Adv.	P	S	A	M	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷							
📷	OFF		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓						
	📷		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
	📷		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓				
📷	OFF	AUTO	✓	✓			✓	✓	✓			✓	✓			✓										✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
		📷	✓	✓			✓	✓	✓			✓	✓			✓											✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓				
		S📷					✓	✓	✓			✓	✓																											✓	✓			
	ON	📷	✓	✓	✓	✓	✓	✓	✓			✓	✓			✓																								✓	✓			
		📷	✓	✓			✓	✓	✓			✓	✓																															
		📷	✓	✓	✓	✓	✓	✓	✓			✓	✓			✓																									✓	✓		
📷	✓	✓	✓	✓	✓	✓	✓			✓	✓			✓																										✓	✓			
📷	📷/📷	✓	✓	✓	✓	✓	✓	✓			✓	✓			✓																										✓	✓		
📷	📷	📷		✓				✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		📷	✓	✓				✓	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		📷	✓	✓				✓	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
		📷	✓	✓				✓	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	📷						✓	✓	✓	✓	✓																																	
	📷						✓	✓	✓	✓	✓																																	
	📷						✓	✓	✓	✓	✓																																	
AEL/AFL			✓		✓	✓	✓	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

				Adv.						P	S	A	M	SP																												
ISO	AUTO	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹			✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹				
	12800									✓	✓	✓	✓	✓																												
	6400									✓	✓	✓	✓	✓																												
	5000									✓	✓	✓	✓	✓																												
	4000									✓	✓	✓	✓	✓																												
	3200									✓	✓	✓	✓	✓																												
	2500									✓	✓	✓	✓	✓																												
	2000									✓	✓	✓	✓	✓																												
	1600									✓	✓	✓	✓	✓																												
	1250									✓	✓	✓	✓	✓																												
	1000									✓	✓	✓	✓	✓																												
	800									✓	✓	✓	✓	✓																												
	640									✓	✓	✓	✓	✓																												
	500									✓	✓	✓	✓	✓																												
	400									✓	✓	✓	✓	✓																												
	320									✓	✓	✓	✓	✓																												
	250									✓	✓	✓	✓	✓																												
200									✓	✓	✓	✓	✓																													
100									✓	✓	✓	✓	✓																													
AE ¹		✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹			✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹		
										✓	✓	✓	✓	✓																												
										✓	✓	✓	✓	✓																												
AE ⁴		✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹			✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹		
			✓							✓	✓	✓	✓	✓																												
AF-C		✓ ¹	✓							✓	✓	✓	✓	✓	✓																											
AF-S			✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹			✓	✓	✓	✓	✓	✓	✓																										
MF ⁷			✓							✓	✓	✓	✓	✓	✓																											
WB										✓	✓	✓	✓	✓																												

		iso+	📷	📷	📷	📷	Adv.	P	S	A	M	SP															
		📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	
📷	📷	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	📷	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	📷	✓	✓	✓	✓	✓	✓ ¹	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
📷	FINE	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	NORMAL	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	FINE+RAW	✓ ³	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓	✓	✓	✓	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³
	NORMAL+RAW	✓ ³	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓	✓	✓	✓	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³
📷	RAW	✓ ³	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓	✓	✓	✓	✓	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³	✓ ³
	AUTO	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓	✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹
	📷							✓ ¹	✓	✓	✓	✓															
	📷								✓	✓	✓	✓															
📷	📷	✓	✓	✓	✓	✓	✓ ¹	✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹
	📷		✓	✓	✓	✓		✓	✓	✓	✓																
	📷		✓	✓	✓	✓		✓	✓	✓	✓																
	📷		✓	✓	✓	✓		✓	✓	✓	✓																
	📷		✓	✓	✓	✓		✓	✓	✓	✓																
	📷	✓	✓	✓	✓	✓		✓	✓	✓	✓																
	📷	✓	✓	✓	✓	✓		✓	✓	✓	✓																
	📷	✓	✓	✓	✓	✓		✓	✓	✓	✓																
	📷	✓	✓	✓	✓	✓		✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷								✓	✓	✓	✓																
📷	✓	✓						✓	✓	✓	✓																

		iSD+	Camera	Adv.					P	S	A	M	SP																												
				WiFi	Bluetooth	GPS	Auto	Video					Flash	Smart	Scene	Image	White Balance	Color	Zoom	Time	Auto	White Balance	Color	Zoom	Time	Auto	White Balance	Color	Zoom	Time	Auto	White Balance	Color	Zoom	Time						
[Camera Modes]	[P]	✓																																							
	[S]	✓ ²	✓	✓	✓	✓ ³	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ²	✓ ³	✓ ³	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓ ³	✓ ³	✓ ³				
	[MF]		✓					✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
	[A]							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	[M]							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
[Focus Modes]	[MF]							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	[AF-ON]	✓ ¹	✓	✓	✓		✓	✓	✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
	[AF-ON]		✓	✓	✓		✓	✓	✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	[AF-ON]		✓	✓	✓	✓ ¹	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	OFF		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
[AF-ON]	✓	✓	✓	✓	✓ ³	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	

1 Optimized for selected shooting mode.

2 **ON** selected automatically.

3 **OFF** selected automatically.

4 Flash disabled in all shooting modes if lowered.

5 [MULTI] selected automatically when Intelligent Face Detection is on.

6 Camera focuses on faces when Intelligent Face Detection is on.

7 Intelligent Face Detection turns off automatically in manual focus mode.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

http://www.fujifilm.com/products/digital_cameras/index.html

Please contact your local distributor for repairs and technical support. (see Worldwide Network list)