



# Parts and Operating Manual

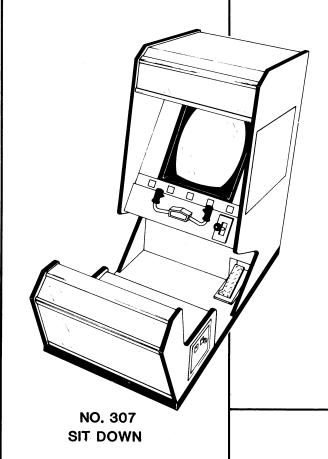

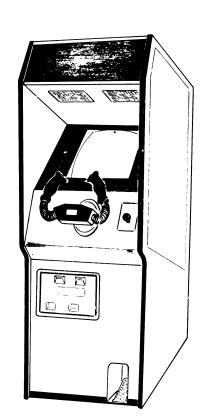

NO. A27 UPRIGHT

Bally

MIDWAY MFG. CO.

10601 W. Belmont Avenue Franklin Park, Illinois 60131 U.S.A.



Phone: (312) 451-9200

Cable Address: MIDCO

Telex No.: 72-1596

# SPY HUNTER

# TABLE OF CONTENTS

DESCRIPTION PAG	
GAME OPERATION	
ILLUSTRATED PARTS BREAKDOWN	
SPY HUNTER SIT DOWN - FRONT	
SPY HUNTER UPRIGHT NON-INTERCHANGEABLE PARTS LISTS	
SPY HUNTER UPRIGHT - FRONT	
SCHEMATICS & WIRING DIAGRAM	
WIRING DIAGRAM	
CPU MCR III P.C COMPONENT LAYOUT	

# SPY HUNTER GAME OPERATION

### ATTRACT MODE

- 1. The Attract mode starts:
  - ☐ Just after power has been turned on to the game. (Self-Test switch is in the "OFF" position.)
  - ☐ After a Self-Test has been completed and there are no more credits left in the games memory.
  - After a play has been finished, the score was not high enough to put the game into the High Score/Initial mode, and there are no more credits left in the games memory.
  - ☐ After the High Score/Initial mode when there are no more credits left in its memory.
  - □ No matter where the game is in the Attract mode sequence, it will immediately go to the Ready-To-Play mode display as soon as a game has been paid for.

### **READY-TO-PLAY MODE**

- The Ready-To-Play mode starts when enough coins have been accepted for a 1 player game.
- 2. The Ready-To-Play mode ends when the "WEAPONS VAN" push button is pressed (it also serves as a "START" button).

### **PLAY MODE**

- 1. The Play mode begins when the "WEAPONS VAN" push button is pressed (it also serves as a "START" button).
- The Play mode ends when all of your CARS have been eliminated. When this happens, "GAME OVER" is written across the monitor screen.

### **HIGH SCORE/INITIAL MODE:**

If your score was high enough to become one of the ten best scores, the game will go into the High Score/Initial mode immediately after the "GAME OVER" display. If your score is not high enough to cause the game to go into the High Score/Initial mode, it will either go to the Attract mode (if there are no more credits left in its memory) or into the Ready-To-Play mode (if there are still credits left in its memory).

Follow the ON-SCREEN instructions to enter your initials next to your score in the league of the best ten players to date.

After the High Score/Initial mode, the game will either go to the Attract mode (if there are no more credits left in its memory) or into the Ready-To-Play mode (if there are still credits left in its memory).

## SPY HUNTER

# SCORING

DESCRIPTION	POINTS AWARDED	NOTES
BUMPER CAR	150 POINTS	ON THE ROAD
TIRE SLASHER	150 POINTS	ON THE ROAD
LIMO	500 POINTS	ON THE ROAD
SPEED BOAT	150 POINTS	IN THE WATER
TORPEDO BOAT	500 POINTS	IN THE WATER
HELICOPTER	700 POINTS	ROAD & WATER
STAYING ON ROAD	15 POINTS	FOR EACH 1/4 SCREEN TRAVELED
STAYING IN WATER	25 POINTS	FOR EACH 1/4 SCREEN TRAVELED

### SPY HUNTER

### OPTION SWITCH SETTINGS

**DURING GAME PLAY:** 

SW#1 SW#2 SW#3 SW#4 SW#5 SW#6 SW#7 SW#8 SW#9 SW#10

NOT NOT NOT NOT NOT NOT NOT

USED USED USED USED USED USED USED USED

FREEZE VIDEO
\*\*NORMAL OPERATION

ON OFF

SW#1 \*SW#2 \*SW#3 \*SW#4

\*\*NORMAL OPERATION OFF
SOUND I/O DIAGNOSTIC MODE ON

\*\*NORMAL OPERATION OFF RAM/ROM TEST ON

INDICATES TEST RESULTS VIA YELLOW L E D ON SOUND I/O BOARD:

FAST FLASH = BAD ROM SLOW FLASH = BAD RAM

\*\*NORMAL OPERATION OFF OSCILLATOR TEST ON

\*\*NORMAL OPERATION OFF
FILTER TEST ON

\*NO EFFECT IF SW#1 OF SWITCH NO. 3 IS IN THE "OFF" POSITION.

\*\*FACTORY RECOMMENDED SETTINGS.

PART NO. M051-00307-A007

THE REMAINDER OF YOUR NEW GAME'S MOST COMMON OPTION SETTINGS ARE CONDUCTED DURING THE **MACHINE SETUP** PORTION OF THE SELF-TEST MODE.