

T I M E P I L L O T  
\*\*\*\*\*

SETTING FOR DIP SW

	DIP SW 1	1	2	3	4	5	6	7	8
COIN 1 COIN 1	1 credit	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	2	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	3	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
	4	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
COIN 2 COIN 1	1 credit	ON	ON	ON	ON	ON	ON	ON	ON
	2	ON	ON	ON	ON	ON	ON	ON	ON
	3	ON	ON	ON	ON	ON	ON	ON	ON
	4	ON	ON	ON	ON	ON	ON	ON	ON
COIN 2 COIN 1	1 credit	ON	ON	ON	ON	ON	ON	ON	ON
	2	ON	ON	ON	ON	ON	ON	ON	ON
	3	ON	ON	ON	ON	ON	ON	ON	ON
	4	ON	ON	ON	ON	ON	ON	ON	ON
NUMBER OF PLAYERS	3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	4	ON	ON	ON	ON	ON	ON	ON	ON
	5	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	256	ON	ON	ON	ON	ON	ON	ON	ON
BONUS: 10,000/50,000	TABLE	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
POINT 20,000/60,000	UPRIGHT	ON	ON	ON	ON	ON	ON	ON	ON
DEMONSTRATION	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SOUND	ON	ON	ON	ON	ON	ON	ON	ON	ON

PARTS		SOLDER
+12V	A 1	-5V
SPEAKER	B 2	SPEAKER
	C 3	2P SHOOT
2P RIGHT	D 4	2P LEFT
2P START	E 5	1P START
2P UP	F 6	
SERVICE	H 7	1P SHOOT
1P LEFT	J 8	1P RIGHT
2P DOWN	K 9	1P UP
COIN 2	L 10	COIN 1
COIN COUNTER 1	M 11	1P DOWN
COIN COUNTER 2	N 12	
TV BLUE	P 13	TV GREEN
TV SYNC	R 14	TV RED
	S 15	
GND	T 16	GND
GND	U 17	GND
+5V	V 18	+5V



Bestseite	Lötseite
1 - 12V	1 - 12V
2 - Lautspr. -	2 - Lautspr. +
3 -	3 - 2sp. Taster Links
4 - 2sp. Links	4 - 2sp. rechts
5 - 2sp. Start	5 - 1sp. Start
6 - 2sp. out	6 -
7 - Credit	7 - Schuß 1
8 - 1sp. Links	8 - 1sp. rechts
9 - 2sp. ab	9 - 1sp. out
10 - Münze ein	10 - X
11 - X	11 - 1sp. ab
12 - X	12 - X
13 - blau	13 - grün
14 - rot	14 - sync
15 - X	15 - X
16 - Gn	16 - Gn

Time Pilot  
→

Best.	Lötseite
17 - Gn	17 - Gn
18 - +5V	18 - +5V

TIME PILOT