

VT-VT-VT-VT-VT-VT-VT-VT-VT-VT

Ш

CONC

VIEWING

NEW

4


## DENSON ELECTRONICS CORPORATION

Rockville, Connecticut

Instructions Only - 50/C - Stock No. 779



Rockville, Conn. Area Code 203 875-5198

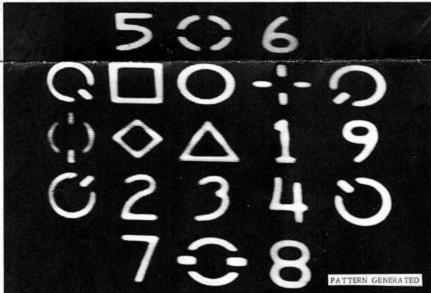

NEED A STABLE TEST SIGNAL SOURCE FOR ONLY \$9, 95

AND A FEW PARTS FROM YOUR JUNK BOX????

AND A FEW PARTS FROM YOUR JUNK BOX????

Here is the easiest way to get your Camera, Transmitter or Monitor Set up and opera ing properly. Our Type 1698 Test Monotron tube with a few parts from an old TV set Here is the easiest way to get your Camera, Transmitter or Monitor Set up and operator the usual electronic experimenters clutch pile used in the simple circuit supplied or the usual electronic experimenters clutch place about the relevision Systems. Simpler with the tube gets you started in Closed Circuit or Amateur Television Systems. Simpler this pattern generator produces a than a flying spot scanner-LESS fussy than a camera, this pattern generator produces a series of figures and numbers from the self-contained pattern. Stock No. 700FA-2 ONLY Series of rightes and manuels from the sentence - Ship.Wt. 3 lbs., #779 Inst. ONLY 500/ E #710 6"x6" mu-metal for shield \$3.95 #713 14 Pin socket w attached lead \$1.50 711 Model MSN Power Trans. 18.95 716 400 MA 400 PIV Divise a complete whem the of


#710 6"x6" mu-metal for shield \$3.95 #713 14 Pin socket w attached lead \$1.50

1 711 Model MSN Power Trans. 18.95 716 400 MA 400 PIV Diodes for D1-D-6 45 fea Constructed piece of ATV gear and found yourself-capacitors are in MFD unless otherwise stated. Component values in dise need of a fixed video test signal? Probably so, and if you renot shown on the schematic are given in the parts list at the end of a fixed yideo test signal? Probably so, and if you renot shown on the schematic are given in the parts list at the end of a fixing spot scanner and used it to generate the pattern. Without (1) Mount the monoscope such that the lead from the signal cap downed doubt, this works very well, but oh what a way to whittle the life to the grid of the first video amp is no longer that 6 inches. Use low out of that highly cherished pickup tube. (or CRT in the case of FSS) capacity shielded cable for this job. (2) Keep all transformer and How much more practical this job could have been accomplished witchokes as far from the 1698 as possible to prevent undue beam discretized test patterns, its cost until recently has been prohibitive.

Fixed test patterns, its cost until recently has been prohibitive.

Þ IEW VIEWING CONCEPT

page 1

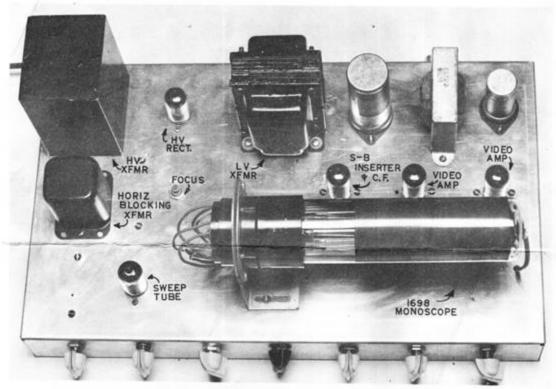

BEAM

CENTERING


HEIGHT NOT USED

WIDTH HORIZ. HOLD

Function of Controls

## MONOSCOPE CAMERA DENSON ELECTRONICS CORP ROCKVILLE, CONNECTICUT

A couple changes which were recently made for improved piz quality. They are: Grounded pin 6 of the monoscope instead of connecting it to point B on the diagram. Results in improved astigmatism with little sacrifice in gain. Changes the .002 waveshaping condenser (this is the one shown connected from the junction point of the 1K resistor and the .0015 capacitor in the horizontal osc plate circuit) to a .001. Improved the horizontal pulse by changing to this lower value. Changed the 15K which connects the 4700 ohm resistor from the plate circuitry of the vertical discharge tube to pin 7 of V-3B (sync tube) to 6800 ohms. Improved the vertical sync clipping. A little mu-metal shield is needed to prevent beam distortion.

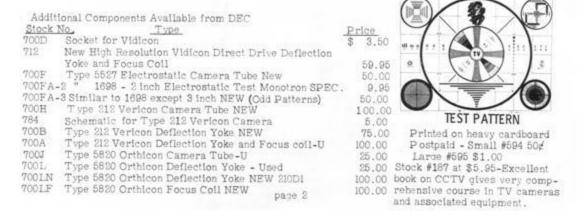

## FOR CLOSED-CIRCUIT APPLICATIONS VIA MONOSCOPE

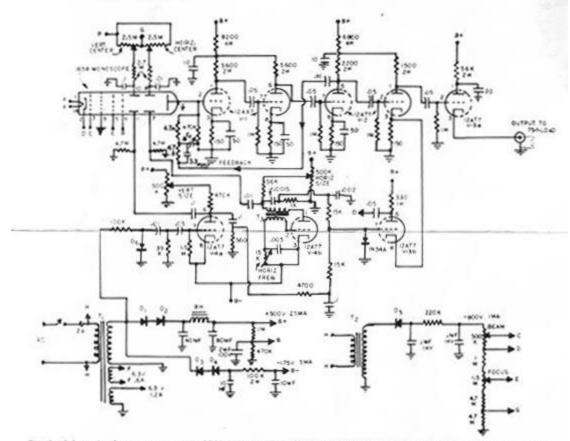


Fig. 1 - Schematic of monoscope camers. \*Cf is a 4-40mmid. compression trimmer. The sizes of the 47K and 3.7mmid (in the feedback loop) can be altered if elimination of smear cannot be obtained within the range of C., Variations in individual wiring practices frequently result in such out of range situations. However, careful wiring using standard video amp practices should prevent

Dil. The entire unit can easily be con-structed on an 12 x 17 inch chamis. A photo showing the parts laythis.

The entire unit can easily be constructed on an 11 x 17 inch chassis. A phono showing the parts layout in our original unit is shown on the front cover. This arrangement in our original unit is shown on the front cover. This arrangement more to the left rear, since in the location shows its magnetic field effects the monoscope beam with the mu-metal shield removed. OPERATION: The minute current variations developed across the signal load resistor (470K grid resistor in first amp) are ufficiently amplified by a four stage video amplifier; the first three stages of which incurrent negative feedback to offset the capacity losses from the signal plate and signal lead to ground. The amplified signal is coupled to the 75 ohm line through the cathode follower, V33. Spac-blanking pulses are mixed with the video in the cathode circuit of V1b. Note that the cathode of the 1688 is operated about 800 V above ground. Therefore the filament must also be operated above ground from a separate winding. Vertical sweep is obtained through a discharge stage, V4a locked to the AC line through a waveshaping and clipping network.

Borizontal sweep is obtained from a blocking oscillator, V4b. The combinateion sync-blanking pulse acade deflection amp is nexed, clipped and inverted in the fourth video amp by the sync-blanking inserter, V3b. Focusing, beam current adjustment and contenting controls are all conventional similar to those uned in most scope circuits. The two power supplies are also quite straight-forward and should require no explanation... just one thing, it will be noticed that we have \*500 and a \*minus 175 inmead of a single \* 415. The reason being, 500 volts was

careful wiring using standard video amp practices should prevent ocsted for the video amps and sync inserter but the additional voltage was advantageous for improved sweep linearity. Voltage dropping resistors could have been used but we liked the face that this allowed us to use readily available lower voltage capacitors both in the power supply and also in the coupling and discharge networks. The method you choose will depend on your own personal perference.
TUNE UP: Assuming no wiring errors or defective components, check out procedure is relatively simple compared to a flying spot or vidicon. Being an electrostatic type rube (r's merely a matter of correctly setting the adjustment pots. Proceed in the

matter of correctly setting the adjustment pots. Proceed in the

a matter of correctly setting the adjustment pots. Proceed in the following manner:

(1) Set all knobs except the beam (which should be set for monitorum bias) to mid-tange.

(2) Check to make sure monitor is properly adjusted on a local station prior to feeding video to it. (be sure it's properly terminated.)

minated.)

(3) New apply power and allow about 2 minutes for stabilization. The monitor should now be locked vertically since the vertical sweep is derived from the 60 CPS line. The borizontal ox is five running and unless you were lacky will probably not be on frequency. If this is the case, adjust the frequency pot in the camera till the monitor is properly locked.

(4) You are now ready to see if you can get a pattern. Start advancing the beam control (lowering the grid bias.) An image should immediately become visible. If so, continue bringing up the beam until a normal contrast picture is obtained. Now the centering, focus and size controls can be adjusted for best picture.

page 3

